

| | | |
|--|------------------------|----------|
| F-DPU100 Distributed Processing Unit User Manual | Product Version | Page |
| | V1.2.0 | |
| | Product Name: F-DPU100 | Total:81 |

F-DPU100 Distributed Processing Unit User Manual

The user manual is suitable for the following model:

| Model | Product Type |
|-------|--------------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |



Xiamen Four-Faith Smart Power Technology Co., Ltd.

Add: 11th Floor, A-06 Area, No.370, Chengyi Street, Jimei, Xiamen, Fujian, China.

Zip Code: 361021

Tel: +86-17750019379

Email: business@four-faith.com

Web: <http://en.four-faith.net>




Files Revised Record

| Date | Version | Remark | Author |
|-----------|---------|--------------------------------------|--------|
| 2015-6-16 | V1.00 | Initial version | ZBQ/WT |
| 2016-1-20 | V1.01 | Modify parameter and install picture | Harven |
| 2017-8-31 | V1.2.0 | Modify the parameters | Harven |
| | | | |

Copyright Notice

All contents in the files are protected by copyright law, and all copyrights are reserved by Xiamen Four-Faith Communication Technology Co., Ltd. Without written permission, all commercial use of the files from Four-Faith are forbidden, such as copy, distribute, reproduce the files, etc., but non-commercial purpose, downloaded or printed by individual (all files shall be not revised, and the copyright and other proprietorship notice shall be reserved) are welcome.

Trademark Notice

Four-Faith、四信、、、 are all registered trademarks of Xiamen Four-Faith Communication Technology Co., Ltd., illegal use of the name of Four-Faith, trademarks and other marks of Four-Faith is forbidden, unless written permission is authorized in advance.



Contents

| | |
|--|----|
| Chapter 1 Brief Introduction of Product..... | 7 |
| 1.1 General..... | 7 |
| 1.2 Features and Benefits..... | 7 |
| 1.3 Working Principle..... | 9 |
| 1.4 Specifications..... | 9 |
| Chapter 2 Installation Introduction..... | 12 |
| 2.1 General..... | 12 |
| 2.2 Encasement List..... | 12 |
| 2.3 Installation and Cable Connection..... | 12 |
| 2.4 Power..... | 16 |
| 2.5 Indicator Lights Introduction..... | 16 |
| 2.6 Reset Button Introduction..... | 17 |
| Chapter 3 Configuration and Management..... | 18 |
| 3.1 Configuration Connection..... | 18 |
| 3.2 Access the Configuration Web Page..... | 18 |
| 3.3 Management and configuration..... | 20 |
| 3.3.1 Setting..... | 20 |
| 3.3.1.1 Basic Setting..... | 20 |
| 3.3.1.2 Dynamic DNS..... | 25 |
| 3.3.1.3 Clone MAC Address..... | 26 |
| 3.3.1.4 Advanced F-DPU100..... | 27 |
| 3.3.1.5 VLANs..... | 28 |
| 3.3.1.6 Networking..... | 29 |
| 3.3.2 Wireless..... | 32 |
| 3.3.2.1 Basic Settings..... | 32 |
| 3.3.2.2 Wireless Security..... | 34 |
| 3.3.3 Services..... | 36 |
| 3.3.3.1 Services..... | 36 |
| 3.3.4 VPN..... | 39 |
| 3.3.4.1 PPTP..... | 39 |
| 3.3.4.2 L2TP..... | 40 |
| 3.3.4.3 OPENVPN..... | 41 |
| 3.3.4.4 IPSEC..... | 45 |
| 3.3.4.5 GRE..... | 47 |
| 3.3.5 Security..... | 49 |
| 3.3.5.1 Firewall..... | 49 |
| 3.3.6 Access Restrictions..... | 51 |
| 3.3.6.1 WAN Access..... | 51 |
| 3.3.6.2 URL Filter..... | 54 |
| 3.3.6.3 Packet Filter..... | 55 |
| 3.3.7 NAT..... | 56 |
| 3.3.7.1 Port Forwarding..... | 56 |

| | |
|------------------------------------|------------------|
| 3.3.7.2 Port Range Forward..... | 56 |
| 3.3.7.3 DMZ..... | 57 |
| 3.3.8 QoS Setting..... | 57 |
| 3.3.8.1 Basic..... | 57 |
| 3.3.8.2 Classify..... | 58 |
| 3.3.9 Applications..... | 58 |
| 3.3.9.1 Serial Applications..... | 58 |
| 3.3.9.2 communication gateway..... | 60 |
| 3.3.10 Administration..... | 66 |
| 3.3.10.1 Management..... | 66 |
| 3.3.10.2 Keep Alive..... | 68 |
| 3.3.10.3 Commands..... | 69 |
| 3.3.10.4 Factory Defaults..... | 69 |
| 3.3.10.5 Firmware Upgrade..... | 70 |
| 3.3.10.6 Backup..... | 70 |
| 3.3.11 Status..... | 71 |
| 3.3.11.1 F-DPU100..... | 错误！未定义书签。 |
| 3.3.11.2 WAN..... | 73 |
| 3.3.11.3 LAN..... | 75 |
| 3.3.11.4 Wireless..... | 78 |
| 3.3.11.5 Bandwidth..... | 79 |
| 3.3.11.6 Sys-Info..... | 81 |
| Appendix..... | 83 |


Chapter 1 Brief Introduction of Product

1.1 General

F-DPU100 Distributed Processing Unit is a kind of cellular terminal device that provides Protocol integration and data transfer function by public cellular network.

It adopts high-powered industrial 32-bits CPU and embedded real time operating system. It supports RS232/RS485, Ethernet and WIFI port that can conveniently and transparently connect one device to a cellular network, allowing you to connect to your existing serial, Ethernet and WIFI devices with only basic configuration.

It has been widely used on M2M fields, Such as photo-voltaic power, substation and other electric industries, urban building energy management, the management of enterprise energy consumption and so on.

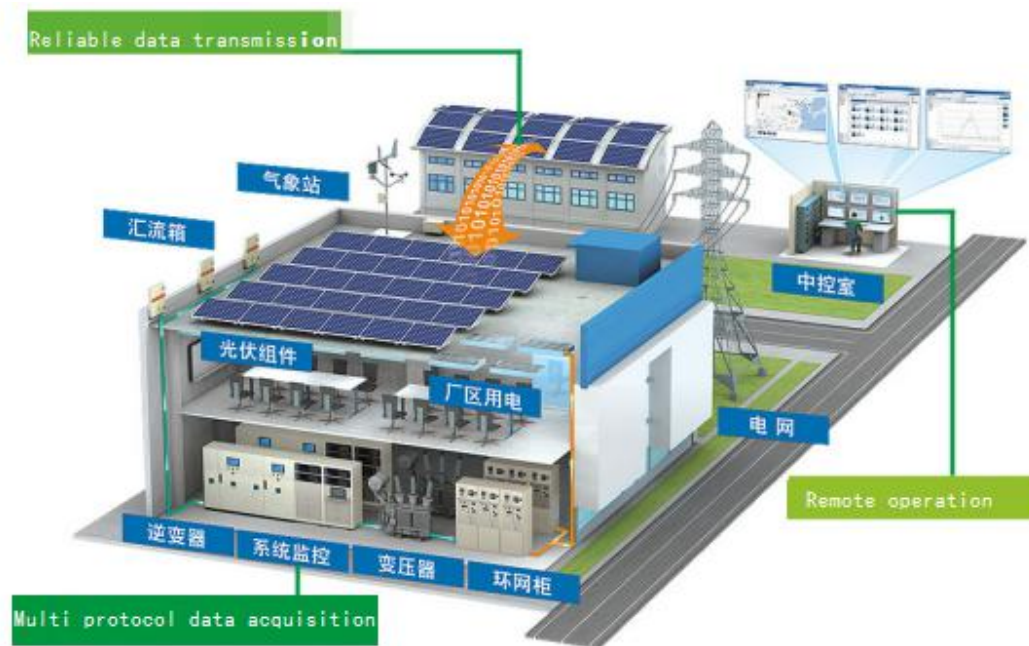

1.2 Features and Benefits

Design for Industrial Application

- ◆ High-powered industrial cellular module
- ◆ High-powered industrial 32bits CPU
- ◆ Support low-consumption mode, including sleep mode, scheduled online/offline mode
- ◆ Housing: iron, providing IP30 protection.
- ◆ Power range: DC 5~36V

Stability and Reliability

- ◆ Support hardware and software WDT

- ◆ Support auto recovery mechanism, including online detect, auto redial when offline to make device always online
- ◆ Ethernet port: 1.5KV magnetic isolation protection
- ◆ RS232/RS485 port: 15KV ESD protection
- ◆ SIM/UIM port: 15KV ESD protection
- ◆ Power port: reverse-voltage and overvoltage protection
- ◆ Antenna port: lightning protection(optional)

Standard and Convenience


- ◆ Support standard RS232/RS485, Ethernet and WIFI port that can connect to serial, Ethernet and WIFI devices directly
- ◆ Support standard WAN port and PPPOE protocol that can connect to ADSL directly
- ◆ Support intellectual mode, enter into communication state automatically when powered
- ◆ Provide management software for remote management
- ◆ Support several work modes
- ◆ Convenient configuration and maintenance interface (WEB or CLI)

High-performance

- ◆ Support multiple WAN access methods, including static IP, DHCP, L2TP, PPTP,PPPOE,2.5G/3G/4G
- ◆ Support double link backup between cellular and WAN(PPPOE, ADSL) (optional)
- ◆ Support VPN client(PPTP, L2TP, OPENVPN, IPSEC and GRE)(only for VPN version)
- ◆ Support VPN server(PPTP, L2TP, OPENVPN, IPSEC and GRE)(only for VPN version)
- ◆ Support local and remote firmware upgrade,import and export configure file
- ◆ Support NTP, RTC embedded
- ◆ Support multiple DDNS provider service
- ◆ Support VLANs, MAC Address clone, PPPoE Server
- ◆ WIFI support 802.11a/b/g/n/ac. support AP, client, Adhoc, Repeater, Repeater Bridge and WDS(optional) mode
- ◆ WIFI support WEP,WPA,WPA2 encryption,Support RADIUS authentication and MAC address filter
- ◆ Support multi online trigger ways, including SMS, ring and data. Support link disconnection when timeout
- ◆ Support APN/VPDN
- ◆ Support DHCP server and client, firewall, NAT, DMZ host , URL block, QoS, ttraff,statistics, real time link speed statistics etc
- ◆ Full protocol support , such as TCP/IP, UDP, ICMP, SMTP, HTTP, POP3, OICQ, TELNET, FTP, SNMP, SSHD, etc
- ◆ Schedule Reboot, Schedule Online and Offline,etc

1.3 Working Principle

The principle chart of the F-DPU100 is as following:

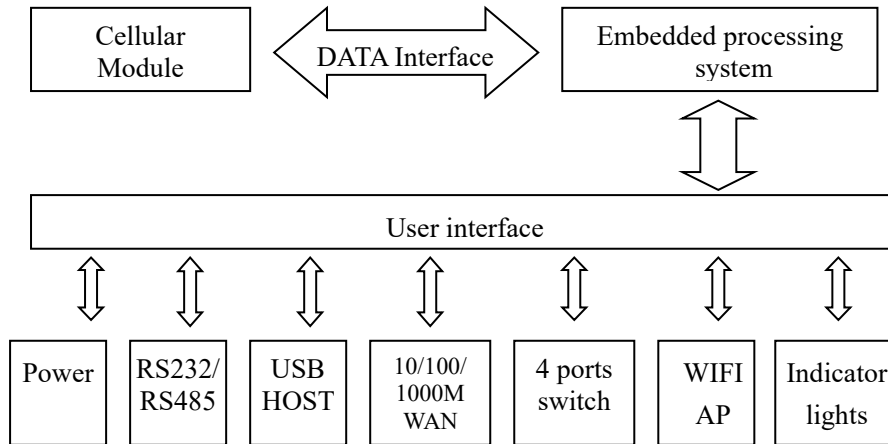

1.4 Specifications

Cellular Specification

| Item | Content |
|-----------------------|--|
| Cellular Module | Industrial cellular module (single or dual module optional) |
| standard | Support TDD-LTE/FDD-LTE/EVDO/WCDMA/TD-SCDMA/CDMA1X /GPRS/EDGE |
| Theoretical bandwidth | FDD LTE: 100Mbps (DL) , 50Mbps (UL) TDD LTE: 68Mbps (DL) , 17Mbps (UL) CDMA2000 1X EVDO Rev A : 3.1Mbps (DL) , 1.8Mbps (UL) WCDMA: 42Mbps (DL) , 5.76Mbps (UL) TD-SCDMA: 4.2Mbps (DL) , 2.2Mbps (UL) |
| transmitting power | <24dBm |
| receiving sensitivity | <-109dBm |

WIFI Specification


| Item | Content |
|----------------|--|
| Standard | IEEE802.11b/g/n (2.4GHz)and 802.11ac(5.8GHz) dual-band Wi-Fi |
| Bandwidth | IEEE802.11b/g: 54Mbps (max) IEEE802.11n: 300Mbps (max) IEEE802.11ac: 867Mbps (max) |
| Security | WEP, WPA, WPA2, etc WPS (optional) |
| TX power | 20dBm(11n),24dBm(11g),26dBm(11b), 18dBm (11ac) |
| RX sensitivity | <-72dBm@54Mbps |

Hardware System

| Item | Content |
|-------|-----------------------|
| CPU | Industrial 32bits CPU |
| FLASH | 512MB |
| DDR2 | 512MB |

Interface Type

| Item | Content |
|-----------|---|
| WAN | 1 10/100/1000 Mbps WAN port(RJ45), auto MDI/MDIX, 1.5KV magnetic isolation protection |
| LAN | 4 10/100 /1000 Mbps Ethernet ports(RJ45), auto MDI/MDIX, 1.5KV magnetic isolation protection |
| Serial | 1 RS232, 5 RS485 port, 15KV ESD protection Data bits: 5, 6, 7, 8 Stop bits: 1, 1.5(optional), 2 Parity: none, even, odd, space(optional), mark(optional) Baud rate: 2400~115200 bps |
| Indicator | "Power", "System", "Online", "SIM", " LAN1~LAN4 ", "WAN", "WIFI", "Signal Strength" |
| Antenna | Cellular:2 Standard SMA female interface, 50 ohm, lightning protection(optional) WIFI: 1 Standard SMA male interface, 50 ohm, lightning protection(optional) |
| SIM/UIM | Standard 3V/1.8V user card interface, 15KV ESD protection |
| Power | 2PIN Terminal block ,reverse-voltage and over-voltage protection |
| Reset | Restore the device to its original factory default settings |

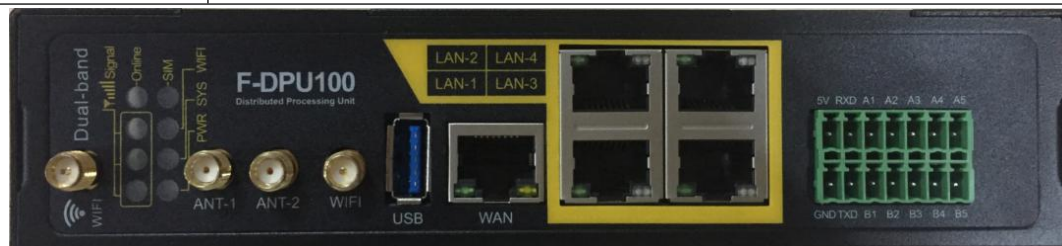

Power Input

| Item | Content |
|----------------|-------------|
| Standard Power | DC 12V/1.5A |
| Power Range | DC 5~36V |

Consumption

| Item | Content |
|----------------|--|
| Standard power | DC 12V/1.5A |
| Power range | DC 5~36V |
| Communication | 3G: <640mA (12V) 4G: <720mA (12V) |
| Standby | 3G: <530mA (12V) 4G: <600mA (12V) |

Physical Characteristics

| Item | Content |
|------------|---------------------------------|
| Housing | Iron, providing IP30 protection |
| Dimensions | 172x122x38 mm |
| Weight | 700g |

Environmental Limits

| Item | Content |
|-----------------------|-----------------------|
| Operating Temperature | -35~+75°C(-31~+167°F) |
| Storage Temperature | -40~+85°C(-40~+185°F) |
| Operating Humidity | 95% (Non-condensing) |

Chapter 2 Installation Introduction

2.1 General

The F-DPU100 must be installed correctly to make it work properly.


Warning: Forbid to install the F-DPU100 when powered!

2.2 Encasement List


| Name | Quantity | Remark |
|-----------------------------|----------|--------|
| F-DPU100 host | 1 | |
| Cellular antenna (Male SMA) | 2 | |
| WIFI antenna (Female SMA) | 1 | |
| Network cable | 1 | |
| Power adapter | 1 | |
| Manual CD | 1 | |
| Certification card | 1 | |
| Maintenance card | 1 | |

2.3 Installation and Cable Connection

Stator and routing equipment of screw specification for: M3 * 5 mm countersunk head screws (black)

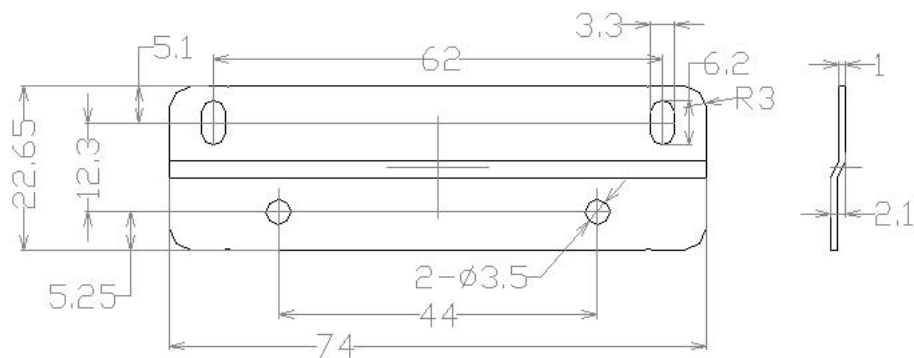

Fixed Size

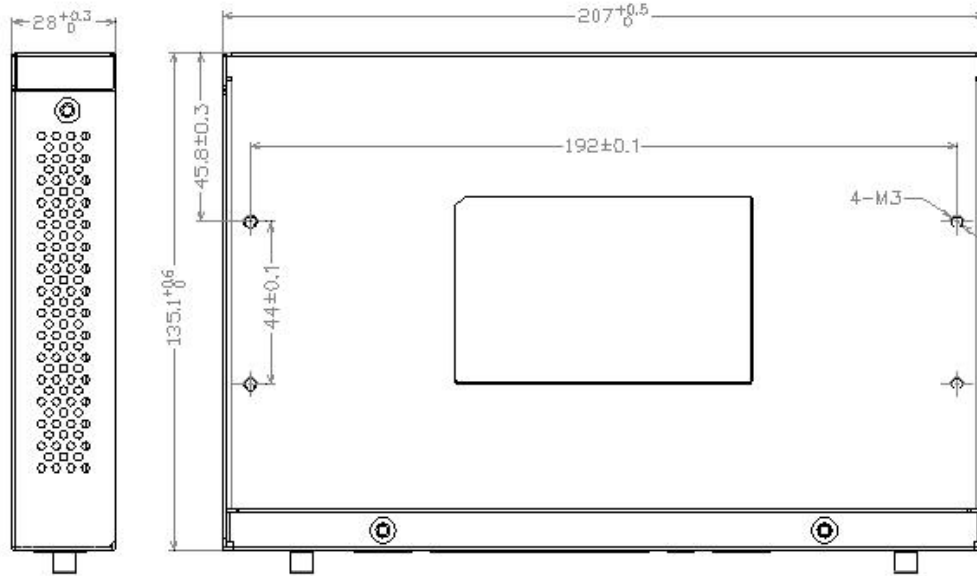

F-DPU100 Size


Installation of SIM/UIM card:

Firstly power off the F-DPU100, and press the out button of the SIM/UIM card outlet with a needle object. Then the SIM/UIM card sheath will flick out at once. Put SIM/UIM card into the card sheath (Pay attention to put the side which has metal point outside), and insert card sheath back to the SIM/UIM card outlet.

Warning: Forbid to install SIM/UIM card when powered!



Step1

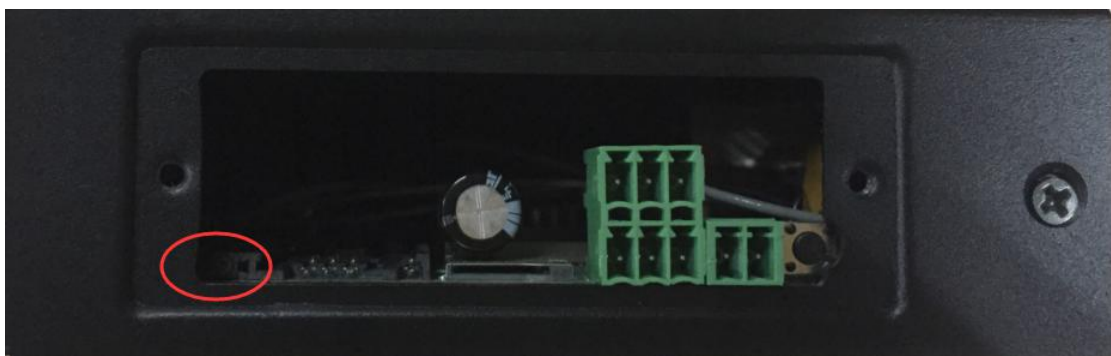

Step2



Step3



Step4

Installation of antenna:

Screw the SMA male pin of the cellular antenna to the female SMA interface of the F-DPU100 with sign “ANT-M” and “ANT-A”.


Screw the SMA female pin of the WIFI antenna to the male SMA interface of the F-DPU100 with sign “WIFI”.

Warning: The cellular antenna and the WIFI antenna can not be connected wrongly. And the antennas must be screwed tightly, or the signal quality of antenna will be influenced!

Installation of cable:


Insert one end of the network cable into the switch interface with sign “Local Network”, and insert the other end into the Ethernet interface of user’s device. The signal connection of network direct cable is as follows:

| RJ45-1 | RJ45-2 | Color |
|--------|--------|--------------|
| 1 | 1 | White/Orange |
| 2 | 2 | Orange |
| 3 | 3 | White/Green |
| 4 | 4 | Blue |
| 5 | 5 | White/Blue |
| 6 | 6 | Green |
| 7 | 7 | White/Brown |
| 8 | 8 | Brown |

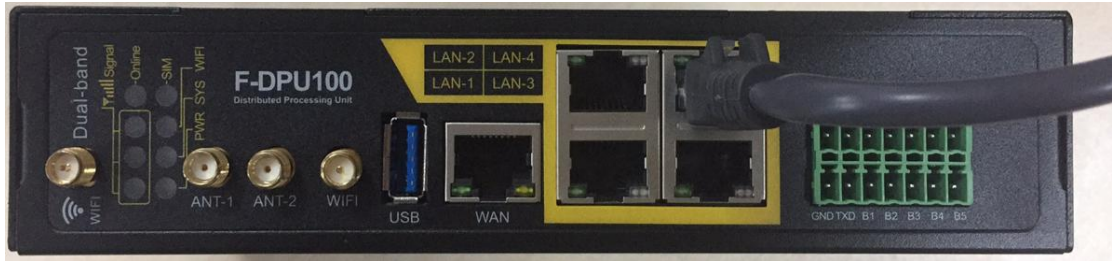

Insert the RJ45 end of the console cable into the RJ45 outlet with sign “console”, and insert the DB9F end of the console cable into the RS232 serial interface of user’s device.

The signal connection of the console cable is as follows:

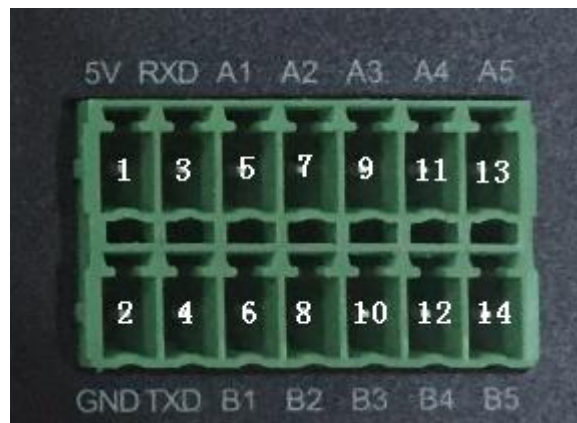

| 14PIN | Signal | Description | Dir (F-DPU100) |
|-------|--------|---------------|----------------|
| 1 | 5V | 5V Power (1W) | Output |
| 2 | GND | Ground | Output |
| 3 | RXD | Receive data | Input |
| 4 | TXD | Transmit data | Output |
| 5 | A1 | 485A1 | Input/Output |
| 6 | B1 | 485B1 | Input/Output |
| 7 | A2 | 485A2 | Input/Output |
| 8 | B2 | 485B2 | Input/Output |
| 9 | A3 | 485A3 | Input/Output |
| 10 | B3 | 485B3 | Input/Output |
| 11 | A4 | 485A4 | Input/Output |
| 12 | B4 | 485B4 | Input/Output |
| 13 | A5 | 485A5 | Input/Output |
| 14 | B5 | 485B5 | Input/Output |



2.4 Power

The power range of the F-DPU100 is DC 5~36V.

Warning: When we use other power, we should make sure that the power can supply power above 8W.

We recommend user to use the standard DC 12V/1.5A power.

2.5 Indicator Lights Introduction

The F-DPU100 provides following indicator lights: “Power”, “System”, “Online”, “SIM”, “Local Network”, “WAN”, “WIFI”, “Signal Strength”.

| Indicator Light | State | Introduction |
|-----------------|-------|-----------------------------------|
| Power | ON | F-DPU100 is powered on |
| | OFF | F-DPU100 is powered off |
| System | BLINK | System works properly |
| | OFF | System does not work |
| Online | ON | F-DPU100 has logged on network |
| | OFF | F-DPU100 hasn't logged on network |
| SIM | ON | The SIM card has been identified |
| | OFF | The SIM card is not recognized |

| | | |
|--------------------|--------------------|--|
| LAN1~ LAN4 | OFF | The corresponding interface of switch is not connected |
| | ON / BLINK | The corresponding interface of switch is connected /Communicating |
| WAN | OFF | The interface of WAN is not connected |
| | ON / BLINK | The interface of WAN is connected /Communicating |
| WIFI | OFF | WIFI is not active |
| | ON | WIFI is active |
| Signal Strength | One Light ON | Signal strength is weak |
| | Two Lights ON | Signal strength is medium |
| | Three Lights ON | Signal strength is good |

2.6 Reset Button Introduction


The Device has a “Reset” button to restore it to its original factory default settings. When user press the “Reset” button for up to 15s, the device will restore to its original factory default settings and restart automatically.

Chapter 3 Configuration and Management

This chapter describes how to configure and manage the F-DPU100.

3.1 Configuration Connection

Before configuration, you should connect the F-DPU100 and your configuration PC with the supplied network cable. Plug the cable's one end into the Local Network port of the F-DPU100, and another end into your configure PC's Ethernet port. The connection diagram is as following:

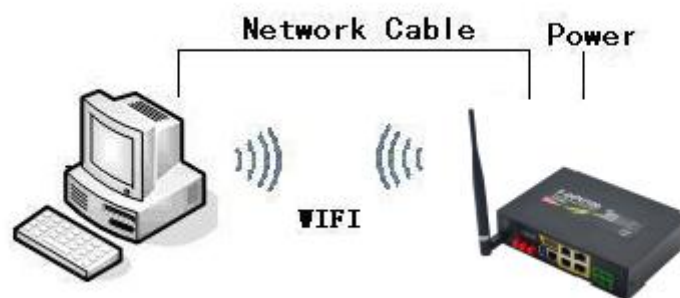

Please modify the IP address of PC as the same network segment address of the F-DPU100, for instance, 192.168.4.9. Modify the mask code of PC as 255.255.255.0 and set the default gateway of PC as the F-DPU100's IP address (192.168.4.1).

3.2 Access the Configuration Web Page

The chapter is to present main functions of each page. Users visit page tool via web browser after connect users' PC to the F-DPU100. There are eleven main pages: Setting, Wireless, Service, VPN, Security, Access Restrictions, NAT, QoS Setting, Applications, Management and Status. Users enable to browse slave pages by click one main page..

Users can open IE or other explorers and enter the F-DPU100's default IP address of 192.168.1.1 on address bar, then press the botton of Enter to visit page Web management tool of the F-DPU100. The users login in the web page at the first name, there will display a page shows as blow to tip users to modify the default user name and password of the F-DPU100. Users have to click "change password" to make it work if they modify user name and password.

Router Management

Your Router is currently not protected and uses an unsafe default username and password combination, please change it using the following dialog!

Router Password

Router Username:

Router Password:

Re-enter to confirm:

After access to the information main page

| | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
|--|---|---------------|--|-------------|--------|--------------|--------|---------|-------------------|---------|-------------------|--------------|-------------------|--------|---------------|--------|-------------|-----------------|--|-------|-------------|------|----|---------|-------|------|------------|---------|--------------|----------|-------|------|----------|-----------------------------|--|---------------|----------------|------------------|----------------|--|-----------------|--|-------------|---------|------------|----------|-------------|---------|---------------|--|-----------------|---------------------|------|--------------------|------|--------------------|---------|------------------|--------|-------------------|--------|-------------------|----------|------------------|
| <p>Menu</p> <ul style="list-style-type: none"> Setup Wireless Services VPN Security NAT Access Restrictions QoS Setting Applications Administration Status | <p>System Information</p> <table border="1"> <tr> <td colspan="2">Router</td> </tr> <tr> <td>Router Name</td> <td>Router</td> </tr> <tr> <td>Router Model</td> <td>Router</td> </tr> <tr> <td>LAN MAC</td> <td>00:0C:43:8C:B6:D6</td> </tr> <tr> <td>WAN MAC</td> <td>00:0C:43:8C:B6:D7</td> </tr> <tr> <td>Wireless MAC</td> <td>00:0C:43:8C:B6:D8</td> </tr> <tr> <td>WAN IP</td> <td>192.168.9.223</td> </tr> <tr> <td>LAN IP</td> <td>192.168.1.1</td> </tr> </table> <table border="1"> <tr> <td colspan="2">Wireless</td> </tr> <tr> <td>Radio</td> <td>Radio is On</td> </tr> <tr> <td>Mode</td> <td>AP</td> </tr> <tr> <td>Network</td> <td>Mixed</td> </tr> <tr> <td>SSID</td> <td>ssid-7620a</td> </tr> <tr> <td>Channel</td> <td>6 (2437 MHz)</td> </tr> <tr> <td>TX Power</td> <td>71 mW</td> </tr> <tr> <td>Rate</td> <td>300 Mb/s</td> </tr> </table> <table border="1"> <tr> <td colspan="2">Wireless Packet Info</td> </tr> <tr> <td>Received (RX)</td> <td>0 OK, no error</td> </tr> <tr> <td>Transmitted (TX)</td> <td>0 OK, no error</td> </tr> </table> | Router | | Router Name | Router | Router Model | Router | LAN MAC | 00:0C:43:8C:B6:D6 | WAN MAC | 00:0C:43:8C:B6:D7 | Wireless MAC | 00:0C:43:8C:B6:D8 | WAN IP | 192.168.9.223 | LAN IP | 192.168.1.1 | Wireless | | Radio | Radio is On | Mode | AP | Network | Mixed | SSID | ssid-7620a | Channel | 6 (2437 MHz) | TX Power | 71 mW | Rate | 300 Mb/s | Wireless Packet Info | | Received (RX) | 0 OK, no error | Transmitted (TX) | 0 OK, no error | <table border="1"> <tr> <td colspan="2">Services</td> </tr> <tr> <td>DHCP Server</td> <td>Enabled</td> </tr> <tr> <td>ff-radauth</td> <td>Disabled</td> </tr> <tr> <td>USB Support</td> <td>Enabled</td> </tr> </table> <table border="1"> <tr> <td colspan="2">Memory</td> </tr> <tr> <td>Total Available</td> <td>122.3 MB / 128.0 MB</td> </tr> <tr> <td>Free</td> <td>92.3 MB / 122.3 MB</td> </tr> <tr> <td>Used</td> <td>30.0 MB / 122.3 MB</td> </tr> <tr> <td>Buffers</td> <td>3.3 MB / 30.0 MB</td> </tr> <tr> <td>Cached</td> <td>11.6 MB / 30.0 MB</td> </tr> <tr> <td>Active</td> <td>10.3 MB / 30.0 MB</td> </tr> <tr> <td>Inactive</td> <td>6.4 MB / 30.0 MB</td> </tr> </table> | Services | | DHCP Server | Enabled | ff-radauth | Disabled | USB Support | Enabled | Memory | | Total Available | 122.3 MB / 128.0 MB | Free | 92.3 MB / 122.3 MB | Used | 30.0 MB / 122.3 MB | Buffers | 3.3 MB / 30.0 MB | Cached | 11.6 MB / 30.0 MB | Active | 10.3 MB / 30.0 MB | Inactive | 6.4 MB / 30.0 MB |
| Router | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Router Name | Router | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Router Model | Router | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| LAN MAC | 00:0C:43:8C:B6:D6 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| WAN MAC | 00:0C:43:8C:B6:D7 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Wireless MAC | 00:0C:43:8C:B6:D8 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| WAN IP | 192.168.9.223 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| LAN IP | 192.168.1.1 | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Wireless | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Radio | Radio is On | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Mode | AP | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Network | Mixed | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| SSID | ssid-7620a | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Channel | 6 (2437 MHz) | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| TX Power | 71 mW | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Rate | 300 Mb/s | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Wireless Packet Info | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Received (RX) | 0 OK, no error | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Transmitted (TX) | 0 OK, no error | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Services | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| DHCP Server | Enabled | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| ff-radauth | Disabled | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| USB Support | Enabled | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Memory | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Total Available | 122.3 MB / 128.0 MB | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Free | 92.3 MB / 122.3 MB | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Used | 30.0 MB / 122.3 MB | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Buffers | 3.3 MB / 30.0 MB | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Cached | 11.6 MB / 30.0 MB | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Active | 10.3 MB / 30.0 MB | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |
| Inactive | 6.4 MB / 30.0 MB | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | | |

Users need to input user name and password if it is their first time to login.



Input correct user name and password to visit relevant menu page. Default user name is admin, password is admin. (available to modify user name and password on management page, then click submit)

3.3 Management and configuration

3.3.1 Setting

The Setup screen is the first screen users will see when accessing the F-DPU100. Most users will be able to configure the F-DPU100 and get it work properly using only the settings on this screen. Some Internet Service Providers (ISPs) will require users to enter specific information, such as User Name, Password, IP Address, Default Gateway Address, or DNS IP Address. These information can be obtained from your ISP, if required.

3.3.1.1 Basic Setting

WAN Connection Type

Seven Ways: Disabled, Static IP, Automatic Configuration-DHCP, PPPOE, 3G/UNMTS/4G/LTE, DHCP-4G.

Disabled

Connection Type

Forbid the setting of WAN port connection type

Static IP

| | |
|-----------------|---|
| Connection Type | Static IP <input type="button" value="v"/> |
| WAN IP Address | <input type="text" value="0"/> . <input type="text" value="0"/> . <input type="text" value="0"/> . <input type="text" value="0"/> |
| Subnet Mask | <input type="text" value="0"/> . <input type="text" value="0"/> . <input type="text" value="0"/> . <input type="text" value="0"/> |
| Gateway | <input type="text" value="0"/> . <input type="text" value="0"/> . <input type="text" value="0"/> . <input type="text" value="0"/> |
| Static DNS 1 | <input type="text" value="0"/> . <input type="text" value="0"/> . <input type="text" value="0"/> . <input type="text" value="0"/> |
| Static DNS 2 | <input type="text" value="0"/> . <input type="text" value="0"/> . <input type="text" value="0"/> . <input type="text" value="0"/> |
| Static DNS 3 | <input type="text" value="0"/> . <input type="text" value="0"/> . <input type="text" value="0"/> . <input type="text" value="0"/> |

WAN IP Address: Users set IP address by their own or ISP assigns

Subnet Mask: Users set subnet mask by their own or ISP assigns

Gateway: Users set gateway by their own or ISP assigns

Static DNS1/DNS2/DNS3: Users set static DNS by their own or ISP assigns

Automatic Configuration-DHCP

| | |
|-----------------|---|
| Connection Type | Automatic Configuration - DHCP <input type="button" value="v"/> |
|-----------------|---|

IP address of WAN port gets automatic via DHCP

PPPOE

| | | |
|-----------------|--|---------------------------------|
| Connection Type | PPPoE <input type="button" value="v"/> | |
| User Name | <input type="text"/> | |
| Password | <input type="text"/> | <input type="checkbox"/> Unmask |

User Name: login the Internet

Password: login the Internet

3G/UMTS/4G/LTE

| | | |
|-----------------|--|---------------------------------|
| Connection Type | 3G/UMTS/4G/LTE <input type="button" value="v"/> | |
| User Name | <input type="text"/> | |
| Password | <input type="text"/> | <input type="checkbox"/> Unmask |
| Dial String | *99***1# (UMTS/3G/3.5G) <input type="button" value="v"/> | |
| APN | <input type="text"/> | |
| PIN | <input type="text"/> | <input type="checkbox"/> Unmask |

User Name: login users' ISP(Internet Service Provider)

Password: login users' ISP

Dial String: dial number of users' ISP

APN: access point name of users' ISP

PIN: PIN code of users' SIM card

Connection type

Connection type

Connection type: Auto, Force 3G, Force 2G, Prefer 3G, Prefer 2G options. If using 4G module, there has 4G network option. Users select different mode depending on their need

DHCP-4G

Connection Type

IP address of WAN port gets automatic via DHCP-4G

Keep Online

Keep Online Detection

Detection Interval Sec.

Primary Detection Server IP

Backup Detection Server IP

This function is used to detect whether the Internet connection is active, if users set it and when the F-DPU100 detect the connection is inactive, it will redial to users' ISP immediately to make the connection active. If the network is busy or the user is in private network, we recommend that F-DPU100 mode will be better.

Detection Method:

None: do not set this function

Ping: Send ping packet to detect the connection, when choose this method, users should also configure "Detection Interval", "Primary Detection Server IP" and "Backup Detection Server IP" items.

Route: Detect connection with route method, when choose this method, users should also configure "Detection Interval", "Primary Detection Server IP" and "Backup Detection Server IP" items.

PPP: Detect connection with PPP method, when choose this method, users should also configure "Detection Interval" item.

Detection Interval: time interval between two detections, unit is second

Primary Detection Server IP: the server used to response the F-DPU100's detection packet. This item is only valid for method "Ping" and "Route".

Backup Detection Server IP: the server used to response the F-DPU100's detection packet. This item is valid for method "Ping" and "Route".

Note: When users choose the "Route" or "Ping" method, it's quite important to make sure that the "Primary Detection Server IP" and "Backup Detection Server IP" are usable and stable,

because they have to response the detection packet frequently.

Force reconnect Enable Disable
 Time :

Force reconnect: this option schedules the pppoe or 3G reconnection by killing the pppd daemon and restart it.

Time: needed time to reconnect

STP

STP Enable Disable

STP (Spaning Tree Protocol) can be applied to loop network. Through certain algorithm achieves path redundancy, and loop network cuts to tree-based network without loop in the meantime, thus to avoid the hyperplasia and infinite circulation of a message in the loop network

Optional Configuration

Router Name
 Host Name
 Domain Name
 MTU

F-DPU100 Name: set F-DPU100 name

Host Name: ISP provides

Domain Name: ISP provides

MTU: auto (1500) and manual (1200-1492 in PPPOE/PPTP/L2TP mode, 576-16320 in other modes)

F-DPU100 Internal Network Settings

F-DPU100 IP

| | | | | |
|------------------|----------------------------------|----------------------------------|----------------------------------|--------------------------------|
| Local IP Address | <input type="text" value="192"/> | <input type="text" value="168"/> | <input type="text" value="1"/> | <input type="text" value="1"/> |
| Subnet Mask | <input type="text" value="255"/> | <input type="text" value="255"/> | <input type="text" value="255"/> | <input type="text" value="0"/> |
| Gateway | <input type="text" value="0"/> | <input type="text" value="0"/> | <input type="text" value="0"/> | <input type="text" value="0"/> |
| Local DNS | <input type="text" value="0"/> | <input type="text" value="0"/> | <input type="text" value="0"/> | <input type="text" value="0"/> |

Local IP Address: IP address of the F-DPU100

Subnet Mask: the subnet mask of the F-DPU100

Gateway: set internal gateway of the F-DPU100. If default, internal gateway is the address of the F-DPU100

Local DNS: DNS server is auto assigned by network operator server. Users enable to use their own DNS server or other stable DNS servers, if not, keep it default

Network Address Server Settings (DHCP)

These settings for the F-DPU100's Dynamic Host Configuration Protocol (DHCP) server functionality

configuration. The F-DPU100 can serve as a network DHCP server. DHCP server automatically assigns an IP address for each computer in the network. If they choose to enable the F-DPU100's DHCP server option, users can set all the computers on the LAN to automatically obtain an IP address and DNS, and make sure no other DHCP server in the network.

| | |
|----------------------|---|
| DHCP Type | <input type="text" value="DHCP Server"/> |
| DHCP Server | <input checked="" type="radio"/> Enable <input type="radio"/> Disable |
| Start IP Address | 192.168.1. <input type="text" value="100"/> |
| Maximum DHCP Users | <input type="text" value="50"/> |
| Client Lease Time | <input type="text" value="1440"/> minutes |
| Static DNS 1 | <input type="text" value="0"/> . <input type="text" value="0"/> . <input type="text" value="0"/> . <input type="text" value="0"/> |
| Static DNS 2 | <input type="text" value="0"/> . <input type="text" value="0"/> . <input type="text" value="0"/> . <input type="text" value="0"/> |
| Static DNS 3 | <input type="text" value="0"/> . <input type="text" value="0"/> . <input type="text" value="0"/> . <input type="text" value="0"/> |
| WINS | <input type="text" value="0"/> . <input type="text" value="0"/> . <input type="text" value="0"/> . <input type="text" value="0"/> |
| Use DNSMasq for DHCP | <input checked="" type="checkbox"/> |
| Use DNSMasq for DNS | <input checked="" type="checkbox"/> |
| DHCP-Authoritative | <input checked="" type="checkbox"/> |

DHCP Type: DHCP Server and DHCP Forwarder

Enter DHCP Server if set DHCP Type to DHCP Forwarder as blow:

| | |
|-------------|---|
| DHCP Type | <input type="text" value="DHCP Forwarder"/> |
| DHCP Server | <input type="text" value="0"/> . <input type="text" value="0"/> . <input type="text" value="0"/> . <input type="text" value="0"/> |

DHCP Server: keep the default Enable to enable the F-DPU100's DHCP server option. If users have already have a DHCP server on their network or users do not want a DHCP server, then select Disable

Start IP Address: enter a numerical value for the DHCP server to start with when issuing IP addresses. Do not start with 192.168.1.1 (the F-DPU100's own IP address).

Maximum DHCP Users: enter the maximum number of PCs that users want the DHCP server to assign IP addresses to. The absolute maximum is 253 if 192.168.1.2 is users' starting IP address.

Client Lease Time: the Client Lease Time is the amount of time a network user will be allowed connection to the F-DPU100 with their current dynamic IP address. Enter the amount of time, in minutes, that the user will be "leased" this dynamic IP address.

Static DNS (1-3): the Domain Name System (DNS) is how the Internet translates domain or website names into Internet addresses or URLs. Users' ISP will provide them with at least one DNS Server IP address. If users wish to utilize another, enter that IP address in one of these fields.

Users can enter up to three DNS Server IP addresses here. The F-DPU100 will utilize them for quicker access to functioning DNS servers.

WINS: the Windows Internet Naming Service (WINS) manages each PC's interaction with the Internet. If users use a WINS server, enter that server's IP address here. Otherwise, leave it blank.

DNSMasq: users' domain name in the field of local search, increase the expansion of the host option, to adopt DNSMasq can assign IP addresses and DNS for the subnet, if select DNSMasq, dhcpd service is used for the subnet IP address and DNS.

Time Settings

Select time zone of your location. To use local time, leave the checkmark in the box next to Use local time.

| | |
|-------------------|---|
| NTP Client | <input checked="" type="checkbox"/> Enable <input type="checkbox"/> Disable |
| Time Zone | UTC+08:00 ▼ |
| Summer Time (DST) | last Sun Mar - last Sun Oct ▼ |
| Server IP/Name | <input type="text"/> |

NTP Client: Get the system time from NTP server

Time Zone: Time zone options

Summer Time (DST): set it depends on users' location

Server IP/Name: IP address of NTP server, up to 32 characters. If blank, the system will find a server by default

Adjust Time

| | | | |
|------|---|------------------------------------|------------------------------------|
| Time | <input type="text" value="2012"/> - <input type="text" value="3"/> - <input type="text" value="15"/> <input type="text" value="9"/> : <input type="text" value="16"/> : <input type="text" value="20"/> | <input type="button" value="Get"/> | <input type="button" value="Set"/> |
|------|---|------------------------------------|------------------------------------|

To adjust time by the system and refresh to get the time of the web, user can set to modify the time of the system. They can change to adjust time by manual to achieve adjust time by the system if the system fails to get NTP server

3.3.1.2 Dynamic DNS

If user's network has a permanently assigned IP address, users can register a domain name and have that name linked with their IP address by public Domain Name Servers (DNS). However, if their Internet account uses a dynamically assigned IP address, users will not know in advance what their IP address will be, and the address can change frequently. In this case, users can use a commercial dynamic DNS service, which allows them to register their domain to their IP address, and will forward traffic directed at their domain to their frequently-changing IP address.

DDNS Service: F-DPU100 currently support DynDNS, freedns, Zoneedit, NO-IP, 3322, easyDNS, TZO, DynSIP and Custom based on the user.

| | |
|--------------|------------|
| DDNS Service | 3322.org ▼ |
|--------------|------------|

| | | |
|------------------------------|---|---------------------------------|
| User Name | <input type="text"/> | |
| Password | <input type="password"/> | <input type="checkbox"/> Unmask |
| Host Name | <input type="text"/> | |
| Type | <input type="button" value="Dynamic"/> ▾ | |
| Wildcard | <input type="checkbox"/> | |
| Do not use external ip check | <input checked="" type="radio"/> Yes <input type="radio"/> No | |

User Name: users register in DDNS server, up to 64 characteristic

Password: password for the user name that users register in DDNS server, up to 32 characteristic

Host Name: users register in DDNS server, no limited for input characteristic for now

Type: depends on the server

Wildcard: support wildcard or not, the default is OFF. ON means *.host.3322.org is equal to host.3322.org

Do not use external ip check: enable or disable the function of 'do not use external ip check'

Force Update Interval (Default: 10 Days, Range: 1 - 60)

Force Update Interval: unit is day, try forcing the update dynamic DNS to the server by setted days

Status

DDNS Status

```
Fri Nov 25 13:58:32 2011: INADYN: Started 'INADYN Advanced version 1.96-ADV' - dynamic DNS updater.  
Fri Nov 25 13:58:32 2011: INADYN: IP read from cache file is '192.168.8.222'. No update required.  
Fri Nov 25 13:58:32 2011: I:INADYN: IP address for alias 'testsixin.3322.org' needs update to '192.168.8.38'  
Fri Nov 25 13:58:33 2011: I:INADYN: Alias 'testsixin.3322.org' to IP '192.168.8.38' updated successfully.
```

DDNS Status shows connection log information

3.3.1.3 Clone MAC Address

Some ISP need the users to register their MAC address. The users can clone the F-DPU100 MAC address to their MAC address registered in ISP if they do not want to re-register their MAC address

Enable Disable

Clone LAN MAC

Clone WAN MAC

Clone Wireless MAC

Clone MAC address can clone three parts: Clone LAN MAC, Clone WAN MAC, Clone Wireless MAC.

Noted that one MAC address is 48 characteristic, can not be set to the multicast address, the first byte must be even. And MAC address value of network bridge br0 is determined by the smaller value of wireless MAC address and LAN port MAC address.

3.3.1.4 Advanced F-DPU100

Operating Mode: Gateway and F-DPU100

Operating Mode

Operating Mode

If the F-DPU100 is hosting users' Internet connection, select Gateway mode. If another F-DPU100 exists on their network, select F-DPU100 mode.

Dynamic Routing

Dynamic Routing

Interface

Dynamic Routing enables the F-DPU100 to automatically adjust to physical changes in the network's layout and exchange routing tables with other F-DPU100s. The F-DPU100 determines the network packets' route based on the fewest number of hops between the source and destination.

To enable the Dynamic Routing feature for the WAN side, select WAN. To enable this feature for the LAN and wireless side, select LAN&WLAN. To enable the feature for both the WAN and LAN, select Both. To disable the Dynamic Routing feature for all data transmissions, keep the default setting, Disable.

Note : Dynamic Routing is not available in Gateway mode

Static Routing

Static Routing

Select set number:

Route Name:

Metric:

Destination LAN NET: ...

Subnet Mask: ...

Gateway: ...

Interface:

Select set number: 1-50

Route Name: defined routing name by users, up to 25 characters

Metric: 0-9999

Destination LAN NET: the Destination IP Address is the address of the network or host to which users want to assign a static route

Subnet Mask: the Subnet Mask determines which portion of an IP address is the network portion, and which portion is the host portion

Gateway: IP address of the gateway device that allows for contact between the F-DPU100 and the network or host.

Interface: indicate users whether the Destination IP Address is on the LAN & WLAN (internal wired and wireless networks), the WAN (Internet), or Loopback (a dummy network in which one PC acts like a network, necessary for certain software programs)

Show Routing Table

| Routing Table Entry List | | | |
|--------------------------|-----------------|-------------|------------|
| Destination LAN NET | Subnet Mask | Gateway | Interface |
| 192.168.1.1 | 255.255.255.255 | 0.0.0.0 | WAN |
| 192.168.1.0 | 255.255.255.0 | 0.0.0.0 | LAN & WLAN |
| 192.168.1.0 | 255.255.255.0 | 0.0.0.0 | WAN |
| 169.254.0.0 | 255.255.0.0 | 0.0.0.0 | WAN |
| 0.0.0.0 | 0.0.0.0 | 192.168.1.1 | LAN & WLAN |

3.3.1.5 VLANs

VLAN

| VLAN | Port | | | | | Assigned To Bridge |
|------|-------------------------------------|-------------------------------------|-------------------------------------|-------------------------------------|-------------------------------------|--------------------|
| | W | 1 | 2 | 3 | 4 | |
| 1 | <input type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | <input checked="" type="checkbox"/> | LAN ▾ |
| 2 | <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | None ▾ |
| 3 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | LAN ▾ |
| 4 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | LAN ▾ |
| 5 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | LAN ▾ |
| 6 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | None ▾ |
| 7 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | None ▾ |
| 8 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | None ▾ |
| 9 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | None ▾ |
| 10 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | None ▾ |
| 11 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | None ▾ |
| 12 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | None ▾ |
| 13 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | None ▾ |
| 14 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | None ▾ |
| 15 | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | None ▾ |

VLANs function is to divide different VLAN ports by users' will. The system supports 15 VLAN port from VLAN1-VLAN15. However there is only 5 time ports (1 WAN port and 4 LAN port) divided by users themselves, and LAN port and WAN port disable to divide into one VLAN port meanwhile.

3.3.1.6 Networking

Bridging

Create Bridge

Bridge 0 STP Prio MTU

Assign to Bridge

Current Bridging Table

| Bridge Name | STP enabled | Interfaces |
|-------------|-------------|------------|
| br0 | no | vlan0 ra0 |

Bridging-Create Bridge: creates a new empty network bridge for later use. STP means Spanning Tree Protocol and with PRIO users are able to set the bridge priority order. The lowest number has the highest priority.

Bridging - Assign to Bridge: allows users to assign any valid interface to a network bridge. Consider setting the Wireless Interface options to Bridged if they want to assign any Wireless Interface here. Any system specific bridge setting can be overridden here in this field.

Current Bridging Table: shows current bridging table

Create steps as below:

Click 'Add' to create a new bridge, configuration is as below:




Create bridge option: the first br0 means bridge name. STP means to on/off spanning tree protocol. Prio means priority level of STP, the smaller the number, the higher the level. MTU means maximum transfer unit, default is 1500, delete if it is not need. And then click 'Save' or 'Add'. Bride properties is as below:



Enter relewant bridge IP address and subnet mask, click 'Add' to create a bridge.

Note: Only create a bride can apply it.

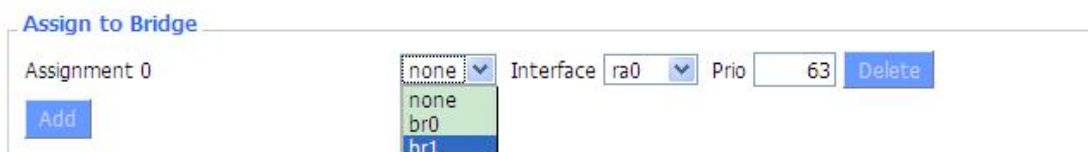

Assign to Bridge option: to assign different ports to created bridge. For example: assign port (wireless port) is ra0 in br1 bridge as below:

Prio means priority level: work if multiple ports are within the same bridge. The smaller the number, the higher the level. Click 'Add' to take it effect.

Note: corresponding interface of WAN ports interface should not be binding, this bridge function is basically used for LAN port, and should not be binding with WAN port

If bind success, bridge binding list in the list of current bridging table is as below:

Current Bridging Table

| Bridge Name | STP enabled | Interfaces |
|-------------|-------------|------------|
| br0 | no | vlan0 |
| br1 | yes | ra0 |

To make br1 bridge has the same function with DHCP assigned address, users need to set multiple DHCP function, see the introduction of multi-channel DHCPD:

Port Setup

| | | |
|------------------------------|---------------------------------|--|
| Network Configuration eth2 | <input type="radio"/> Unbridged | <input checked="" type="radio"/> Default |
| Network Configuration vlan0 | <input type="radio"/> Unbridged | <input checked="" type="radio"/> Default |
| Network Configuration ra0 | <input type="radio"/> Unbridged | <input checked="" type="radio"/> Default |
| Network Configuration apcli0 | <input type="radio"/> Unbridged | <input checked="" type="radio"/> Default |
| Network Configuration wds0 | <input type="radio"/> Unbridged | <input checked="" type="radio"/> Default |
| Network Configuration wds1 | <input type="radio"/> Unbridged | <input checked="" type="radio"/> Default |
| Network Configuration wds2 | <input type="radio"/> Unbridged | <input checked="" type="radio"/> Default |
| Network Configuration wds3 | <input type="radio"/> Unbridged | <input checked="" type="radio"/> Default |
| Network Configuration br0 | <input type="radio"/> Unbridged | <input checked="" type="radio"/> Default |

Port Setup: Set the port property, the default is not set

| | | |
|---------------------------|---|--|
| Network Configuration ra0 | <input checked="" type="radio"/> Unbridged | <input type="radio"/> Default |
| MTU | <input type="text" value="1500"/> | |
| Multicast forwarding | <input type="radio"/> Enable | <input checked="" type="radio"/> Disable |
| Masquerade / NAT | <input checked="" type="radio"/> Enable | <input type="radio"/> Disable |
| IP Address | <input type="text" value="0"/> . <input type="text" value="0"/> . <input type="text" value="0"/> . <input type="text" value="0"/> | |
| Subnet Mask | <input type="text" value="0"/> . <input type="text" value="0"/> . <input type="text" value="0"/> . <input type="text" value="0"/> | |

Choose not bridge to set the port's own properties, detailed properties are as below:

MTU: maximum transfer unit

Multicast forwarding: enable or disable multicast forwarding

Masquerade/NAT: enable or disable Masquerade/NAT

IP Address: set ra0's IP address, and do not conflict with other ports or bridge

Subnet Mask: set the port's subnet mask

Multiple DHCP Server

| | | | | | | | | |
|---------------------------------------|----------------------------------|---------------------------------|-------|----------------------------------|-----|---------------------------------|-----------|-----------------------------------|
| DHCP 0 | <input type="text" value="ra0"/> | <input type="text" value="On"/> | Start | <input type="text" value="100"/> | Max | <input type="text" value="50"/> | Leasetime | <input type="text" value="3600"/> |
| <input type="button" value="Delete"/> | | | | | | | | |
| <input type="button" value="Add"/> | | | | | | | | |

Multiple DHCPD: using multiple DHCP service. Click 'Add' in multiple DHCP server to appear relevant configuration. The first means the name of port or bridge (do not be configured as eth0), the second means whether to on DHCP. Start means start address, Max means maximum assigned DHCP clients, Leasetime means the client lease time, the unit is second, click 'Save' or 'Apply' to put it into effect after setting.

Note: Only configure and click 'Save' can configure the next, can not configure multiple DHCP at the same time.

3.3.2 Wireless

3.3.2.1 Basic Settings

Wireless Physical Interface wlo [2.4 GHz]

Wireless Network Enable Disable

Physical Interface ra0 - SSID [dd-junjinlee] HWAddr [00:AA:BB:CC:DD:15]

| | |
|------------------------------|--|
| Wireless Mode | AP |
| Wireless Network Mode | N-Only |
| 802.11n Transmission Mode | Mixed |
| Wireless Network Name (SSID) | dd-junjinlee |
| Wireless Channel | 11 - 2.462 GHz |
| Channel Width | 40 MHz |
| Extension Channel | upper |
| Wireless SSID Broadcast | <input checked="" type="radio"/> Enable <input type="radio"/> Disable |
| Network Configuration | <input type="radio"/> Unbridged <input checked="" type="radio"/> Bridged |

Virtual Interfaces

Add

Save
Apply Settings
Cancel Changes

Wireless Network: “Eanble”, radio on.
 “Disable”, radio off.

Wireless Mode: AP, Client, Adhoc, Repeater, Repeater Bridge four options.

Wireless Network Mode:

Mixed: Support 802.11b, 802.11g, 802.11n wireless devices.

BG-Mixed: Support 802.11b, 802.11g wireless devices.

B-only: Only supports the 802.11b standard wireless devices.

B-only: Only supports the 802.11b standard wireless devices.

G-only: Only supports the 802.11g standard wireless devices.

NG-Mixed: Support 802.11g, 802.11n wireless devices.

N-only : Only supports the 802.11g standard wireless devices.

802.11n Transmission Mode: In the wireless network mode to "N-only" choose to transfer its transmission mode.

Greenfield: When you determine the surrounding environment, there is no other 802.11a/b/g devices use the same channel, use this mode to increase throughput. Other 802.11a/b/g devices use the same channel in the environment, the information you send may generate an error, re-issued.

Mixed: This mode is contrary to the green mode, but will reduce the throughput.

Wireless Network Name(SSID): The SSID is the network name shared among all devices in a wireless network. The SSID must be identical for all devices in the wireless network. It is case-sensitive and must not exceed 32 alphanumeric characters, which may be any keyboard character. Make sure this setting is the same for all devices in your wireless network.。

Wireless Channel: A total of 1-13 channels to choose more than one wireless device environment, please try to avoid using the same channel with other devices.。

Channel Width: 20MHZ and 40MHZ.。

Extension Channel: Channel for 40MHZ, you can choose upper or lower.

Wireless SSID Broadcast:

Enable: SSID broadcasting.

Disable: Hidden SSID.

Network Configuration:

Bridged: Bridge to the F-DPU100, under normal circumstances, please select the bridge.

Unbridged: There is no bridge to the F-DPU100, IP addresses need to manually configure.

| | |
|-----------------------|---|
| Network Configuration | <input checked="" type="radio"/> Unbridged <input type="radio"/> Bridged |
| Multicast forwarding | <input type="radio"/> Enable <input checked="" type="radio"/> Disable |
| Masquerade / NAT | <input checked="" type="radio"/> Enable <input type="radio"/> Disable |
| IP Address | <input type="text" value="192"/> . <input type="text" value="168"/> . <input type="text" value="1"/> . <input type="text" value="1"/> |
| Subnet Mask | <input type="text" value="255"/> . <input type="text" value="255"/> . <input type="text" value="0"/> . <input type="text" value="0"/> |

Virtual Interfaces: Click Add to add a virtual interface. Add successfully, click on the remove, you can remove the virtual interface.。

Virtual Interfaces

Virtual Interfaces ra1 SSID [dd-wrt_vap] HWAddr [00:AA:BB:CC:DD:16]

| | |
|------------------------------|--|
| Wireless Network Name (SSID) | <input type="text" value="dd-wrt_vap"/> |
| Wireless SSID Broadcast | <input checked="" type="radio"/> Enable <input type="radio"/> Disable |
| AP Isolation | <input type="radio"/> Enable <input checked="" type="radio"/> Disable |
| Network Configuration | <input type="radio"/> Unbridged <input checked="" type="radio"/> Bridged |

AP Isolation: This setting isolates wireless clients so access to and from other wireless clients are stopped.

Note : Save your changes, after changing the "Wireless Mode", "Wireless Network Mode", "wireless width", "broadband" option, please click on this button, and then configure the other options.

3.3.2.2 Wireless Security

Wireless security options used to configure the security of your wireless network. This route is a total of seven kinds of wireless security mode. Disabled by default, not safe mode is enabled. Such as changes in Safe Mode, click Apply to take effect immediately.

Wireless Security w10

Physical Interface ra0 SSID [dd-junjinlee] HWAddr [00:AA:BB:CC:DD:15]

Security Mode Disabled

Wireless Security w10

Physical Interface ra0 SSID [four-faith] HWAddr [00:0C:43:30:52:79]

Security Mode WEP

Authentication Type Open Shared Key

Default Transmit Key 1 2 3 4

Encryption 64 bits 10 hex digits/5 ASCII

ASCII/HEX ASCII HEX

Passphrase 1111111111111111

Key 1 2627F68597

Key 2 15AD1DD294

Key 3 DDC4761939

Key 4 31F1ADB558

WEP: Is a basic encryption algorithm is less secure than WPA. Use of WEP is discouraged due to security weaknesses, and one of the WPA modes should be used whenever possible. Only use WEP if you have clients that can only support WEP (usually older, 802.11b-only clients).

Authentication Type: Open or shared key.

Default Transmit Key: Select the key form Key 1 - Key 4 key.

Encryption: There are two levels of WEP encryption, 64-bit (40-bit) and 128-bit. To utilize WEP, select the desired encryption bit, and enter a passphrase or up to four WEP key in hexadecimal format. If you are using 64-bit (40-bit), then each key must consist of exactly 10 hexadecimal characters or 5 ASCII characters. For 128-bit, each key must consist of exactly 26 hexadecimal

characters. Valid hexadecimal characters are "0"- "9" and "A"- "F".

ASCII/HEX: ASCII, the keys is 5 bit ASCII characters/13bit ASCII characters.

HEX, the keys is 10bit/26 bit hex digits.

Passphrase : The letters and numbers used to generate a key.

Key1-Key4: Manually fill out or generated according to input the pass phrase.

Wireless Security w10

Physical Interface ra0 SSID [dd-junjinlee] HWAddr [00:AA:BB:CC:DD:15]

| | | | |
|-----------------------------------|--------------|---------------------------------|-----------------------------------|
| Security Mode | WPA Personal | ▼ | |
| WPA Algorithms | AES | ▼ | |
| WPA Shared Key | •••••••• | <input type="checkbox"/> Unmask | |
| Key Renewal Interval (in seconds) | 3600 | | (Default: 3600, Range: 1 - 99999) |

Save
Apply Settings

WPA Personal/WPA2 Personal/WPA2 Person Mixed: , TKIP/AES/TKIP+AES , dynamic encryption keys. TKIP + AES, self-applicable TKIP or AES. WPA Person Mixed, allow WPA Personal and WPA2 Personal client mix.

WPA Shared Key: Between 8 and 63 ASCII character or hexadecimal digits.。

Key Renewal Interval (in seconds) : 1-99999。

Wireless Security w10

Physical Interface ra0 SSID [dd-junjinlee] HWAddr [00:AA:BB:CC:DD:15]

| | | | |
|-----------------------------------|---------------------|---------------------------------|-----------------|
| Security Mode | WPA Enterprise | ▼ | |
| WPA Algorithms | AES | ▼ | |
| Radius Auth Server Address | 192 . 168 . 1 . 110 | | |
| Radius Auth Server Port | 1812 | | (Default: 1812) |
| Radius Auth Shared Secret | •••••••• | <input type="checkbox"/> Unmask | |
| Key Renewal Interval (in seconds) | 3600 | | |

WPA Enterprise/WPA2 Enterprise/WPA2 Enterprise Mixed: WPA Enterprise uses an external RADIUS server to perform user authentication.

WPA Algorithms: AES/TKIP/TPIP+AES.

Radius Auth Sever Address: The IP address of the RADIUS server.

Radius Auth Server Port: The RADIUS Port (default is 1812)。

Radius Auth Shared Secret: The shared secret from the RADIUS server.。

Key Renewal Interva(in seconds): 1-99999。

3.3.3 Services

3.3.3.1 Services

DHCP Server

DHCPd assigns IP addresses to users local devices. While the main configuration is on the setup page users can program some nifty special functions here.

DHCP Server

Use JFFS2 for client lease DB (Not mounted)

Use NVRAM for client lease DB

Used Domain WAN

LAN Domain

Additional DHCPd Options

Static Leases

| MAC Address | Host Name | IP Address | Client Lease Time |
|--|--|--|--|
| <input style="width: 90%;" type="text"/> | <input style="width: 90%;" type="text"/> | <input style="width: 90%;" type="text"/> | <input style="width: 90%;" type="text"/> minutes |

Use NVRAM for client lease DB: users can store data to the system NVRAM area is enabled

Used domain: users can select here which domain the DHCP clients should get as their local domain. This can be the WAN domain set on the Setup screen or the LAN domain which can be set here.

LAN Domain: users can define here their local LAN domain which is used as local domain for DNSmasq and DHCP service if chose above.

Static Leases: if users want to assign certain hosts a specific address then they can define them here. This is also the way to add hosts with a fixed address to the F-DPU100's local DNS service (DNSmasq).

Additional DHCPd Options: some extra options users can set by entering them

DNSMasq

DNSmasq is a local DNS server. It will resolve all host names known to the F-DPU100 from dhcp (dynamic and static) as well as forwarding and caching DNS entries from remote DNS servers. Local DNS enables DHCP clients on the LAN to resolve static and dynamic DHCP hostnames.

DNSMasq

| | |
|----------------------------|--|
| DNSMasq | <input checked="" type="radio"/> Enable <input type="radio"/> Disable |
| Local DNS | <input type="radio"/> Enable <input checked="" type="radio"/> Disable |
| No DNS Rebind | <input checked="" type="radio"/> Enable <input type="radio"/> Disable |
| Additional DNSMasq Options | <div style="border: 1px solid #ccc; height: 40px; width: 100%;"></div> |

Local DNS: enables DHCP clients on the LAN to resolve static and dynamic DHCP host names
No DNS Rebind: when enabled, it can prevent an external attacker to access the F-DPU100's internal Web interface. It is a security measure

Additional DNSMasq Options: some extra options users can set by entering them in Additional DNS Options.

For example:

- static allocation:** dhcp-host=AB:CD:EF:11:22:33,192.168.0.10,myhost,myhost.domain,12h
- max lease number:** dhcp-lease-max=2
- DHCP server IP range:** dhcp-range=192.168.0.110,192.168.0.111,12h

SNMP

SNMP

| | |
|--------------|---|
| SNMP | <input checked="" type="radio"/> Enable <input type="radio"/> Disable |
| Location | <input type="text" value="Unknown"/> |
| Contact | <input type="text" value="root"/> |
| Name | <input type="text" value="four-faith"/> |
| RO Community | <input type="text" value="public"/> |
| RW Community | <input type="text" value="private"/> |

Location: equipment location

Contact: contact this equipment management

Name: device name

RO Community: SNMP RO community name, the default is public, Only to read.

RW Community: SNMP RW community name, the default is private, Read-write permissions

SSHD

Enabling SSHd allows users to access the Linux OS of their F-DPU100 with an SSH client

Secure Shell

| | | |
|--------------------|---|--|
| SShd | <input checked="" type="radio"/> Enable | <input type="radio"/> Disable |
| SSH TCP Forwarding | <input type="radio"/> Enable | <input checked="" type="radio"/> Disable |
| Password Login | <input checked="" type="radio"/> Enable | <input type="radio"/> Disable |
| Port | <input type="text" value="22"/> | (Default: 22) |
| Authorized Keys | <input type="text"/> | |

SSH TCP Forwarding: enable or disable to support the TCP forwarding

Password Login: allows login with the F-DPU100 password (username is admin)

Port: port number for SSHd (default is 22)

Authorized Keys: here users paste their public keys to enable key-based login (more secure than a simple password)

System log

Enable Syslogd to capture system messages. By default they will be collected in the local file /var/log/messages. To send them to another system, enter the IP address of a remote syslog server.

System Log

| | | |
|-----------------|---|-------------------------------|
| Syslogd | <input checked="" type="radio"/> Enable | <input type="radio"/> Disable |
| Syslog Out Mode | <input checked="" type="radio"/> Net | <input type="radio"/> Console |
| Remote Server | <input type="text"/> | |

Syslog Out Mode: two log mode

Net: the log information output to a syslog server

Console: the log information output to console port

Remote Server: if choose net mode, users should input a syslog server's IP Address and run a syslog server program on it.

Telnet

Telnet

| | | |
|--------|---|-------------------------------|
| Telnet | <input checked="" type="radio"/> Enable | <input type="radio"/> Disable |
|--------|---|-------------------------------|

Telnet: enable a telnet server to connect to the F-DPU100 with telnet. The username is admin and the password is the F-DPU100's password.

Note: If users use the F-DPU100 in an untrusted environment (for example as a public hotspot), it is strongly recommended to use SSHd and deactivate telnet.

WAN Traffic Counter

WAN Traffic Counter

| | | |
|---------------|---|-------------------------------|
| ttraff Daemon | <input checked="" type="radio"/> Enable | <input type="radio"/> Disable |
|---------------|---|-------------------------------|

Ttraff Daemon: enable or disable wan traffic counter function

3.3.4 VPN

3.3.4.1 PPTP

PPTP Server

PPTP Server

PPTP Server Enable Disable

Broadcast support Enable Disable

Force MPPE Encryption Enable Disable

DNS1

DNS2

WINS1

WINS2

Server IP

Client IP(s)

CHAP-Secrets

Broadcast support: enable or disable broadcast support of PPTP server

Force MPPE Encryption: enable or disable force MPPE encryption of PPTP data

DNS1/DNS2/WINS1/WINS2: set DNS1/DNS2/WINS1/WINS2

Server IP: input IP address of the F-DPU100 as PPTP server, differ from LAN address

Client IP(s): IP address assigns to the client, the format is xxx.xxx.xxx.xxx-xxx

CHAP Secrets: user name and password of the client using PPTP service

Note: client IP must be different with IP assigned by F-DPU100 DHCP.

The format of CHAP Secrets is user * password *.

PPTP Client

PPTP Client

PPTP Client Options Enable Disable

Server IP or DNS Name

Remote Subnet

Remote Subnet Mask

MPPE Encryption

MTU (Default: 1450)

MRU (Default: 1450)

NAT Enable Disable

User Name

Password Unmask

Server IP or DNS Name: PPTP server's IP Address or DNS Name

Remote Subnet: the network of the remote PPTP server

Remote Subnet Mask: subnet mask of remote PPTP server

MPPE Encryption: enable or disable Microsoft Point-to-Point Encryption。

MTU: maximum Transmission Unit

MRU: maximum Receive Unit

NAT: network Address Translation

User Name: user name to login PPTP Server.

Password: password to log into PPTP Server.

3.3.4.2 L2TP

L2TP Server

L2TP Server

L2TP Server Options Enable Disable

Force MPPE Encryption Enable Disable

Server IP

Client IP(s)

CHAP-Secrets

Force MPPE Encryption: enable or disable force MPPE encryption of L2TP data

Server IP: input IP address of the F-DPU100 as PPTP server, differ from LAN address

Client IP(s): IP address assigns to the client, the format is xxx.xxx.xxx.xxx-xxx.xxx.xxx.xxx

CHAP Secrets: user name and password of the client using L2TP service

Note: client IP must be different with IP assigned by F-DPU100 DHCP.

The format of CHAP Secrets is user * password *.

L2TP Client

L2TP Client

L2TP Client Options Enable Disable

User Name

Password Unmask

Gateway (L2TP Server)

Remote Subnet ...

Remote Subnet Mask ...

MPPE Encryption

MTU (Default: 1450)

MRU (Default: 1450)

NAT Enable Disable

Require CHAP Yes No

Refuse PAP Yes No

Require Authentication Yes No

Gateway(L2TP Server): L2TP server’s IP Address or DNS Name

Remote Subnet: the network of remote PPTP server

Remote Subnet Mask: subnet mask of remote PPTP server

MPPE Encryption: enable or disable Microsoft Point-to-Point Encryption

MTU: maximum transmission unit

MRU: maximum receive unit

NAT: network address translation

User Name: user name to login L2TP Server

Password: password to login L2TP Server

Require CHAP: enable or disable support chap authentication protocol

Refuse PAP: enable or disable refuse to support the pap authentication

Require Authentication: enable or disable support authentication protocol

3.3.4.3 OPENVPN

OPENVPN Server

Start Type WAN Up System

Start Type: WAN UP----start after on-line, System----start when boot up

Config via GUI Config File

Server mode Router (TUN) Bridge (TAP)

Config via: GUI----Page configuration, Config File----config File configuration

Server mode: F-DPU100 (TUN)-route mode, Bridge (TAP)----bridge mode

F-DPU100 (TUN):

Network

Netmask

Network: network address allowed by OPENVPN server

Netmask: netmask allowed by OPENVPN server

Bridge (TAP):

DHCP-Proxy mode Enable Disable

Pool start IP

Pool end IP

Gateway

Netmask

DHCP-Proxy mode: enable or disable DHCP-Proxy mode

Pool start IP: pool start IP of the client allowed by OPENVPN server

Pool end IP: pool end IP of the client allowed by OPENVPN server

Gateway: the gateway of the client allowed by OPENVPN server

Netmask: netmask of the client allowed by OPENVPN server

Port (Default: 1194)

Tunnel Protocol

Encryption Cipher

Hash Algorithm

Port: listen port of OPENVPN server

Tunnel Protocol: UCP or TCP of OPENVPN tunnel protocol

Encryption Cipher: Blowfish CBC, AES-128 CBC, AES-192 CBC, AES-256 CBC, AES-512 CBC

Hash Algorithm: Hash algorithm provides a method of quick access to data, including SHA1, SHA256, SHA512, MD5

Advanced Options

Advanced Options Enable Disable

Use LZO Compression Enable Disable

Redirect default Gateway Enable Disable

Allow Client to Client Enable Disable

Allow duplicate cn Enable Disable

TUN MTU Setting (Default: 1500)

MSS-Fix/Fragment across the tunnel (Default: Disable)

TLS Cipher

Client connect script

Use LZO Compression: enable or disable use LZO compression for data transfer

Redirect default Gateway: enable or disable redirect default gateway

Allow Client to Client: enable or disable allow client to client

Allow duplicate cn: enable or disable allow duplicate cn

TUN MTU Setting: set the value of TUN MTU

TCP MSS: MSS of TCP data

TLS Cipher: TLS (Transport Layer Security) encryption standard supports AES-128 SHA and AES-256 SHA

Client connect script: define some client script by user self

CA Cert

CA Cert: CA certificate

Public Server Cert

Public Server Cert: server certificate

Private Server Key

DH PEM

Private Server Key: the key seted by the server

DH PEM: PEM of the server

Additional Config

CCD-Dir DEFAULT file

TLS Auth Key

Certificate Revoke List

Additional Config: additional configurations of the server

CCD-Dir DEFAULT file: other file approaches

TLS Auth Key: authority key of Transport Layer Security

Certificate Revoke List: configure some revoke certificates

OPENVPN Client

| | | |
|-------------------------|---|-----------------|
| Server IP/Name | <input type="text" value="0.0.0.0"/> | |
| Port | <input type="text" value="1194"/> | (Default: 1194) |
| Tunnel Device | <input type="text" value="TUN"/> | |
| Tunnel Protocol | <input type="text" value="UDP"/> | |
| Encryption Cipher | <input type="text" value="Blowfish CBC"/> | |
| Hash Algorithm | <input type="text" value="SHA1"/> | |
| nsCertType verification | <input type="checkbox"/> | |

Server IP/Name: IP address or domain name of OPENVPN server

Port: listen port of OPENVPN client

Tunnel Device: TUN----F-DPU100 mode, TAP----Bridge mode

Tunnel Protocol: UDP and TCP protocol

Encryption Cipher: Blowfish CBC, AES-128 CBC, AES-192 CBC, AES-256 CBC, AES-512 CBC

Hash Algorithm: Hash algorithm provides a method of quick access to data, including SHA1, SHA256, SHA512, MD5

nsCertType verification: support ns certificate type

| | |
|------------------------------------|---|
| Advanced Options | <input checked="" type="radio"/> Enable <input type="radio"/> Disable |
| Use LZO Compression | <input type="radio"/> Enable <input checked="" type="radio"/> Disable |
| NAT | <input type="radio"/> Enable <input checked="" type="radio"/> Disable |
| Bridge TAP to br0 | <input type="radio"/> Enable <input checked="" type="radio"/> Disable |
| Local IP Address | <input type="text"/> |
| TUN MTU Setting | <input type="text" value="1500"/> (Default: 1500) |
| MSS-Fix/Fragment across the tunnel | <input type="text"/> (Default: Disable) |
| TLS Cipher | <input type="text" value="Disable"/> |
| TLS Auth Key | <input type="text"/> |
| Additional Config | <input type="text"/> |
| Policy based Routing | <input type="text"/> |

- Use LZO Compression:** enable or disable use LZO compression for data transfer
- NAT:** enable or disable NAT through function
- Bridge TAP to br0:** enable or disable bridge TAP to br0
- Local IP Address:** set IP address of local OPENVPN client
- TUN MTU Setting:** set MTU value of the tunnel
- TCP MSS:** mss of TCP data
- TLS Cipher:** TLS (Transport Layer Security) encryption standard supports AES-128 SHA and AES-256 SHA
- TLS Auth Key:** authority key of Transport Layer Security
- Additional Config:** additional configurations of OPENVPN server
- Policy based Routing:** input some defined routing policy

| | |
|--------------------|--|
| CA Cert | |
| Public Client Cert | |
| Private Client Key | |

- CA Cert:** CA certificate
- Public Client Cert:** client certificate
- Private Client Key:** client key

3.3.4.4 IPSEC

Connect Status and Control

Show IPSEC connection and status of current F-DPU100 on IPSEC page.

| Connection status and control | | | | |
|--|------|-------------|--------|--------|
| Name | Type | Common Name | status | Action |
| <div style="border: 1px solid #ccc; display: inline-block; padding: 2px 5px; background-color: #4a86e8; color: white;">Add</div> | | | | |

- Name:** the name of IPSEC connection
- Type:** The type and function of current IPSEC connection
- Common name:** local subnet, local address, opposite end address and opposite end subnet of current connection
- Status:** connection status: closed, negotiating, establish
 - Closed:** this connection does not launch a connection request to opposite end
 - Negotiating:** this connection launch a request to opposite end, is under negotiating, the connection has not been established yet
 - Establish:** the connection has been established, enabled to use this tunnel
- Action:** the action of this connection, current is to delete, edit, reconnect and enable
 - Delete:** to delete the connection, also will delete IPSEC if IPSEC has set up

Edit: to edit the configure information of this connection, reload this connection to make the configuration effect after edit

Reconnect: this action will remove current tunnel, and re-launch tunnel establish request

Enable: when the connection is enable, it will launch tunnel establish request when the system reboot or reconnect, otherwise the connection will not do it


Add: to add a new IPSEC connection

Add IPSEC connection or edit IPSEC connection

Type: to choose IPSEC mode and relevant functions in this part, supports tunnel mode client, tunnel mode server and transfer mode currently



Connection: this part contains basic address information of the tunnel

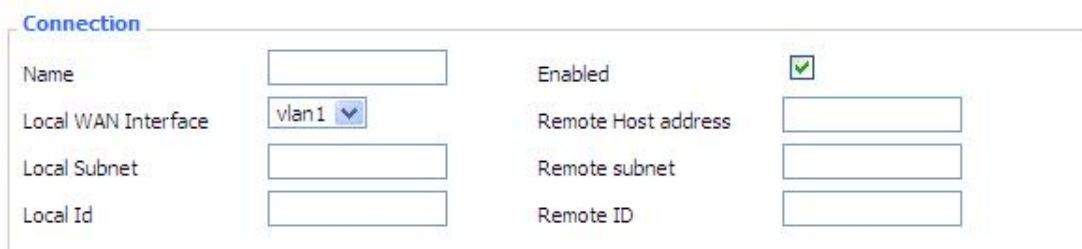

Name: to indicate this connection name, must be unique

Enabled: If enable, the connection will send tunnel connection request when it is reboot or re-connection, otherwise it is no need if disable

Local WAN Interface: local addresss of the tunnel

Remote Host Address: IP/domain name of end opposite; this option can not fill in if using tunnel mode server

Local Subnet: IPsec local protects subnet and subnet mask, i.e. 192.168.1.0/24; this option can not fill in if using transfer mode

Remote Subnet: IPsec opposite end protects subnet and subnet mask, i.e.192.168.7.0/24; this option can not fill in if using transfer mode

Local ID: tunnel local end identification, IP and domain name are available

Remote ID: tunnel opposite end identification, IP and domain name are available

Detection: this part contains configure information of connection detection



Enable DPD Detection: enable or disable this function, tick means enable

Time Interval: set time interval of connect detection (DPD)

Timeout: set the timeout of connect detection

Action: set the action of connect detection

Advanced Settings: this part contains relevant setting of IKE, ESP, negotiation mode, etc.

Advanced Settings

Enable advanced settings

IKE Encryption: 3DES | IKE Integrity: MD5 | IKE Groupype: MODP-8192

IKE Lifetime: 0 hours

ESP Encryption: 3DES | ESP Integrity: MD5

ESP Keylife: 0 hours

IKE+ESP: Use only proposed settings.

IKE aggressive mode allowed. Avoid if possible (preshared key is transmitted in clear text)!

Perfect Forward Secrecy (PFS)

Negotiate payload compression

Enable Advanced Settings: enable to configure 1st and 2nd phase information, otherwise it will automatic negotiation according to opposite end

IKE Encryption: IKE phased encryption mode

IKE Integrity: IKE phased integrity solution

IKE Groupype: DH exchange algorithm

IKE Lifetime: set IKE lifetime, current unit is hour, the default is 0

ESP Encryption: ESP encryption type

ESP Integrity: ESP integrity solution

ESP Keylife: set ESP keylife, current unit is hour, the default is 0

IKE aggressive mode allowed: negotiation mode adopt aggressive mode if tick; it is main mode if non-tick

Negotiate payload compression: Tick to enable PFS, non-tick to diable PFS

Authentication: choose use share encryption option or certificate authentication option. Current is only to choose use share encryption option.

Authentication

Use a Pre-Shared Key:

Generate and use the X.509 certificate

3.3.4.5 GRE

GRE (Generic Routing Encapsulation, Generic Routing Encapsulation) protocol is a network layer protocol (such as IP and IPX) data packets are encapsulated, so these encapsulated data packets to another network layer protocol (IP)transmission. GRE Tunnel (tunnel) technology, Layer Two Tunneling Protocol VPN (Virtual Private Network).

GRE Tunnel

GRE Tunnel Enable Disable

GRE Tunnel: enable or disable GRE function

Number: 1 (fff) Delete

Status: Enable

Name: fff

Through: PPP

Peer Wan IP Addr: 120.42.46.98

Peer Subnet: 192.168.5.0/24 (eg:192.168.1.0/24)

Peer Tunnel IP: 200.200.200.1

Local Tunnel IP: 200.200.200.5

Local Netmask: 255.255.255.0

- Number :** Switch on/off GRE tunnel app
- Status :** Switch on/off someone GRE tunnel app
- Name :** GRE tunnel name
- Through :** The GRE packet transmit interface
- Peer Wan IP Addr :** The remote WAN address
- Peer Subnet :** The remote gateway local subnet, eg: 192.168.1.0/24
- Peer Tunnel IP :** The remote tunnel ip address
- Local Tunnel IP :** The local tunnel ip address
- Local Netmask :** Netmask of local network

Keepalive: Enable Disable

Retry times:

Interval:

Fail Action: Hold

- Keepalive :** Enable or disable GRE Keepalive function
- Retry times :** GRE keepalive detect fail retries
- Interval :** The time interval of GRE keepalive packet sent
- Fail Action :** The action would be exec after keeping alive failed

Click on “**View GRE tunnels**” keys can view the information of GRE

| GRE Tunnels list | | | | | | | | | | | | |
|------------------|------|--------|---------|------------------|----------------|----------------|-----------------|---------------|-----------|-------------|----------|-------------|
| Number | Name | Enable | Through | Peer Wan IP Addr | Peer Subnet | Peer Tunnel IP | Local Tunnel IP | Local Netmask | Keepalive | Retry times | Interval | Fail Action |
| 1 | fff | Yes | PPP | 120.42.46.98 | 192.168.5.0/24 | 200.200.200.1 | 200.200.200.5 | 255.255.255.0 | No | 0 | 0 | Hold |


Refresh Close

3.3.5 Security

3.3.5.1 Firewall


You can enable or disable the firewall, filter specific Internet data types, and prevent anonymous Internet requests, ultimately enhance network security.

Firewall Protection



Firewall enhance network security and use SPI to check the packets into the network. To use firewall protection, choose to enable otherwise disabled. Only enable the SPI firewall, you can use other firewall functions: filtering proxy, block WAN requests, etc.

Additional Filters

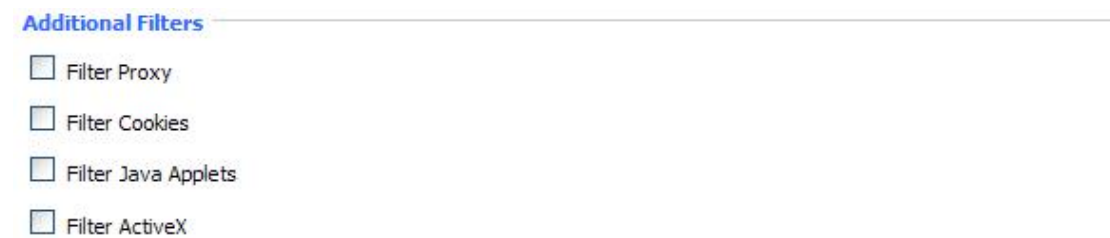


Filter Proxy: Wan proxy server may reduce the security of the gateway, Filtering Proxy will refuse any access to any wan proxy server. Click the check box to enable the function otherwise disabled.

Filter Cookies: Cookies are the website of data the data stored on your computer. When you interact with the site, the cookies will be used. Click the check box to enable the function otherwise disabled.

Filter Java Applets: If refuse to Java, you may not be able to open web pages using the Java programming. Click the check box to enable the function otherwise disabled.

Filter ActiveX: If refuse to ActiveX, you may not be able to open web pages using the ActiveX programming. Click the check box to enable the function otherwise disabled.

Prevent WAN Request

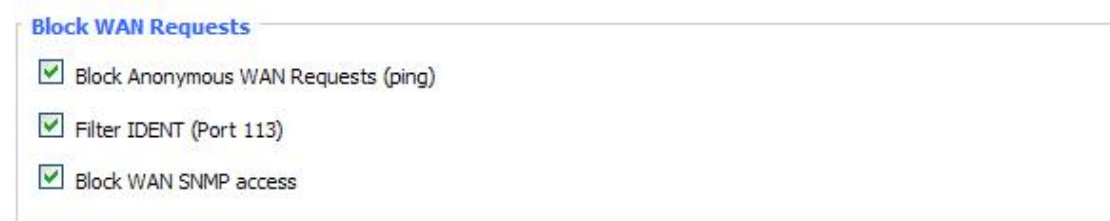

Block Anonymous WAN Requests (ping): By selecting “Block Anonymous WAN Requests (ping)” box to enable this feature, you can prevent your network from the Ping or detection of other Internet users. so that make More difficult to break into your network. The default state of this feature is enabled, choose to disable allow anonymous Internet requests.

Filter IDENT (Port 113): Enable this feature can prevent port 113 from being scanned from

outside. Click the check box to enable the function otherwise disabled.

Block WAN SNMP access: This feature prevents the SNMP connection requests from the WAN. After Complete the changes, click the **Save Settings** button to save your changes. Click the **Cancel Changes** button to cancel unsaved changes.

Impede WAN DoS/Bruteforce

Impede WAN DoS/Bruteforce

Limit SSH Access

Limit Telnet Access

Limit PPTP Server Access

Limit L2TP Server Access

Limit ssh Access: This feature limits the access request from the WAN by ssh, and per minute up to accept two connection requests on the same IP. Any new access request will be automatically dropped.

Limit Telnet Access: This feature limits the access request from the WAN by Telnet, and per minute up to accept two connection requests on the same IP. Any new access request will be automatically dropped.

Limit PPTP Server Access: When build a PPTP Server in the F-DPU100,this feature limits the access request from the WAN by ssh, and per minute up to accept two connection requests on the same IP . Any new access request will be automatically dropped.

Limit L2TP Server Access: When build a L2TP Server in the F-DPU100, this feature limits the access request from the WAN by ssh, and per minute up to accept two connection requests on the same IP. Any new access request will be automatically dropped.

Log Management

The F-DPU100 can keep logs of all incoming or outgoing traffic for your Internet connection.

Log

Log Enable Disable

Log: To keep activity logs, select Enable. To stop logging, select Disable. When select enable, the following page will appear.

Log

Log Enable Disable

Log Level

Options

Dropped

Rejected

Accepted

Log Level: Set this to the required log level. Set Log Level higher to log more actions.

Options: When select Enable, the corresponding connection will be recorded in the journal, the disabled are not recorded.

Incoming Log: To see a temporary log of the F-DPU100's most recent incoming traffic, click the Incoming Log button.

Incoming Log Table

| Source IP | Protocol | Destination Port Number | Rule |
|---|----------|-------------------------|------|
| <div style="display: flex; justify-content: center; gap: 10px;"> Refresh Close </div> | | | |

Outgoing Log: To see a temporary log of the F-DPU100's most recent outgoing traffic, click the Outgoing Log button.

Outgoing Log Table

| LAN IP | Destination URL/IP | Protocol | Service/Port Number | Rule |
|---------------|--------------------|----------|---------------------|----------|
| 192.168.1.164 | 223.203.188.56 | TCP | www | Accepted |
| 192.168.1.164 | 183.60.16.200 | UDP | 8000 | Accepted |
| 192.168.1.164 | 183.60.48.60 | UDP | 8000 | Accepted |
| 192.168.1.164 | 112.95.240.183 | UDP | 8000 | Accepted |
| 192.168.1.164 | 183.60.49.245 | UDP | 8000 | Accepted |
| 192.168.1.164 | 119.147.32.204 | UDP | 8000 | Accepted |
| 192.168.1.164 | 112.90.86.244 | UDP | 8000 | Accepted |
| 192.168.1.164 | 119.147.45.157 | UDP | 8000 | Accepted |
| 192.168.1.164 | 183.60.49.15 | UDP | 8000 | Accepted |
| 192.168.1.164 | 183.60.16.70 | UDP | 8000 | Accepted |
| 192.168.1.164 | 183.60.16.200 | UDP | 8000 | Accepted |
| 192.168.1.164 | 183.60.48.60 | UDP | 8000 | Accepted |

Click the **Save Settings** button to save your changes. Click the **Cancel Changes** button to cancel unsaved changes.

3.3.6 Access Restrictions

3.3.6.1 WAN Access

Use access restrictions, you can block or allow specific types of Internet applications. You can set specific PC-based Internet access policies. This feature allows you to customize up to ten different Internet Access Policies for particular PCs, which are identified by their IP or MAC addresses.

Access Policy

Policy: 1 () Delete Summary

Status: Enable Disable

Policy Name:

PCs: Edit List of clients

Deny Internet access during selected days and hours.

Filter

Two options in the default policy rules: "Filter" and "reject". If select "Deny", you will deny specific computers to access any Internet service at a particular time period. If you choose to

"filter", It will block specific computers to access the specific sites at a specific time period. You can set up 10 Internet access policies filtering specific PCs access Internet services at a particular time period.

Access Policy: You may define up to 10 access policies. Click Delete to delete a policy or Summary to see a summary of the policy.

Status: Enable or disable a policy.

Policy Name: You may assign a name to your policy.

PCs: The part is used to edit client list, the strategy is only effective for the PC in the list.

Days

| | | | | | | | |
|-------------------------------------|--------------------------|--------------------------|--------------------------|--------------------------|--------------------------|--------------------------|--------------------------|
| Everyday | Sun | Mon | Tue | Wed | Thu | Fri | Sat |
| <input checked="" type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> | <input type="checkbox"/> |

Times

24 Hours

From 0 : 00 To 0 : 00

Days: Choose the day of the week you would like your policy to be applied.

Times: Enter the time of the day you would like your policy to be applied.

Website Blocking by URL Address

| | | |
|----------------------|----------------------|----------------------|
| <input type="text"/> | <input type="text"/> | <input type="text"/> |
| <input type="text"/> | <input type="text"/> | <input type="text"/> |
| <input type="text"/> | <input type="text"/> | <input type="text"/> |

Website Blocking by Keyword

| | | | |
|----------------------|----------------------|----------------------|----------------------|
| <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> |
| <input type="text"/> | <input type="text"/> | <input type="text"/> | <input type="text"/> |

Website Blocking by URL Address: You can block access to certain websites by entering their URL.

Website Blocking by Keyword: You can block access to certain website by the keywords contained in their webpage

| List of clients | |
|--|-----------------------------------|
| Enter MAC Address of the clients in this format: xx:xx:xx:xx:xx:xx | |
| MAC 01 | 00:AA:BB:CC:DD:EE |
| MAC 02 | 00:00:00:00:00:00 |
| MAC 03 | 00:00:00:00:00:00 |
| MAC 04 | 00:00:00:00:00:00 |
| MAC 05 | 00:00:00:00:00:00 |
| MAC 06 | 00:00:00:00:00:00 |
| MAC 07 | 00:00:00:00:00:00 |
| MAC 08 | 00:00:00:00:00:00 |
| Enter the IP Address of the clients | |
| IP 01 | 192.168.1. 15 |
| IP 02 | 192.168.1. 0 |
| IP 03 | 192.168.1. 0 |
| IP 04 | 192.168.1. 0 |
| IP 05 | 192.168.1. 0 |
| IP 06 | 192.168.1. 0 |
| Enter the IP Range of the clients | |
| IP Range 01 | 192, 168, 1, 19 ~ 192, 168, 1, 30 |
| IP Range 02 | 0, 0, 0, 0 ~ 0, 0, 0, 0 |

set up Internet access policy

1. Select the policy number (1-10) in the drop-down menu.
2. For this policy is enabled, click the radio button next to "Enable"
3. Enter a name in the Policy Name field.
4. Click the Edit List of PCs button.
5. On the List of PCs screen, specify PCs by IP address or MAC address. Enter the appropriate IP addresses into the IP fields. If you have a range of IP addresses to filter, complete the appropriate IP Range fields. Enter the appropriate MAC addresses into the MAC fields.
6. Click the Apply button to save your changes. Click the Cancel button to cancel your unsaved changes. Click the Close button to return to the Filters screen.
7. If you want to block the listed PCs from Internet access during the designated days and time, then keep the default setting, Deny. If you want the listed PCs to have Internet filtered during the designated days and time, then click the radio button next to Filter.
8. Set the days when access will be filtered. Select Everyday or the appropriate days of the week.
9. Set the time when access will be filtered. Select 24 Hours, or check the box next to From and use the drop-down boxes to designate a specific time period.
10. Click the Add to Policy button to save your changes and active it.

11. To create or edit additional policies, repeat steps 1-9.
12. To delete an Internet Access Policy, select the policy number, and click the Delete button.

Note:

- 3.3.3.1 The default factory value of policy rules is "filtered". If the user chooses the default policy rules for "refuse", and editing strategies to save or directly to save the settings. If the strategy edited is the first, it will be automatically saved into the second, if not the first, keep the original number.
- 3.3.3.2 Turn off the power of the F-DPU100 or reboot the F-DPU100 can cause a temporary failure . After the failure of the F-DPU100, if can not automatically synchronized NTP time server, you need to recalibrate to ensure the correct implementation of the relevant period control function.

3.3.6.2 URL Filter

If you want to prevent certain client access to specific network domain name, such as www.sina.com. We can achieved it through the function of URL filter.

URL filtering function



Url Filter

Url Filter Setting

Enable Url Filter Enable Disable

Policy

| Del | Num | URL |
|--------------------------|-----|--------------|
| <input type="checkbox"/> | 1 | www.sina.com |

Add Filter Rule

Type

Discard packets conform to the following rules: only discard the matching URL address in the list .

Accept only the data packets conform to the following rules: receive only with custom rules of network address, discarded all other URL address.

3.3.6.3 Packet Filter

To block some packets getting Internet access or block some Internet packets getting local network access, you can configure filter items to block these packets.

Packet Filter

Packet filter function is realized based on IP address or port of packets.

Enable Packet Filter Enable Disable

Policy ▼

Enable Packet Filter: Enable or disable “packet filter” function

Policy: The filter rule’s policy, you can choose the following options

Discard The Following--Discard packets conform to the following rules, Accept all other packets

Only Accept The Following-- Accept only the data packets conform to the following rules, Discard all other packets

Add Filter Rule

Direction ▼

Protocol ▼

Source Ports -

Destination Ports -

Source IP . . . /

Destination IP . . . /

Direction

input: packet from WAN to LAN

output: packet from LAN to WAN

Protocol: packet protocol type

Source Ports: packet's source port

Destination Ports: packet's destination port

Source IP: packet's source IP address

Destination IP: packet's destination IP address

Note: "Source Port" , "Destination Port" , "Source IP" , "Destination IP" could not be all empty ,you have to input at least one of these four parameters.

3.3.7 NAT

3.3.7.1 Port Forwarding

Port Forwarding allows you to set up public services on your network, such as web servers, ftp servers, e-mail servers, or other specialized Internet applications. Specialized Internet applications are any applications that use Internet access to perform functions such as videoconferencing or online gaming. When users send this type of request to your network via the Internet, the F-DPU100 will forward those requests to the appropriate PC. If you want to forward a whole range of ports, see [Port Range Forwarding](#).

Forwards

| Application | Protocol | Source Net | Port from | IP Address | Port to | Enable |
|-------------|----------|--------------|-----------|--------------|---------|-------------------------------------|
| web | TCP | 192.168.8.11 | 8000 | 192.168.1.12 | 80 | <input checked="" type="checkbox"/> |
| ftp | Both | 192.168.8.12 | 24 | 192.168.1.12 | 21 | <input checked="" type="checkbox"/> |

Application: Enter the name of the application in the field provided.

Protocol: Chose the right protocol TCP,UDP or Both. Set this to what the application requires.

Source Net: Forward only if sender matches this ip/net (example 192.168.1.0/24).

Port from: Enter the number of the external port (the port number seen by users on the Internet).

IP Address: Enter the IP Address of the PC running the application.

Port to: Enter the number of the internal port (the port number used by the application).

Enable: Click the Enable checkbox to enable port forwarding for the application.

Check all values and click **Save Settings** to save your settings. Click the **Cancel changes** button to cancel your unsaved changes.

3.3.7.2 Port Range Forward

Port Range Forwarding allows you to set up public services on your network, such as web servers, ftp servers, e-mail servers, or other specialized Internet applications. Specialized Internet applications are any applications that use Internet access to perform functions such as videoconferencing or online gaming. When users send this type of request to your network via the Internet, the F-DPU100 will forward those requests to the appropriate PC. If you only want to forward a single port, see [Port Forwarding](#).

Port Range Forward

Forwards

| Application | Start | End | Protocol | IP Address | Enable |
|-------------|-------|-------|----------|--------------|-------------------------------------|
| web-tftp | 800 | 8100 | Both | 192.168.1.16 | <input checked="" type="checkbox"/> |
| game | 9000 | 10000 | Both | 192.168.1.16 | <input checked="" type="checkbox"/> |

Application: Enter the name of the application in the field provided.

Start: Enter the number of the first port of the range you want to be seen by users on the Internet and forwarded to your PC.

End: Enter the number of the last port of the range you want to be seen by users on the Internet and forwarded to your PC.

Protocol: Choose the right protocol TCP,UDP or Both. Set this to what the application requires.

IP Address: Enter the IP Address of the PC running the application.

Enable: Click the Enable checkbox to enable port forwarding for the application.

Check all values and click **Save Settings** to save your settings. Click the **Cancel changes** button to cancel your unsaved changes.

3.3.7.3 DMZ

The DMZ (DeMilitarized Zone) hosting feature allows one local user to be exposed to the Internet for use of a special-purpose service such as Internet gaming or videoconferencing. DMZ hosting forwards all the ports at the same time to one PC. The Port Forwarding feature is more secure because it only opens the ports you want to have opened, while DMZ hosting opens all the ports of one computer, exposing the computer so the Internet can see it.



Any PC whose port is being forwarded must should have a new static IP address assigned to it because its IP address may change when using the DHCP function.

DMZ Host IP Address: To expose one PC to the Internet, select Enable and enter the computer's IP address in the DMZ Host IP Address field. To disable the DMZ, keep the default setting : Disable

Check all values and click **Save Settings** to save your settings. Click the **Cancel changes** button to cancel your unsaved changes.

3.3.8 QoS Setting

3.3.8.1 Basic

Bandwidth management prioritizes the traffic on your F-DPU100. Interactive traffic (telephony, browsing, telnet, etc.) gets priority and bulk traffic (file transfer, P2P) gets low priority. The main goal is to allow both types to live side-by side without unimportant traffic disturbing more critical things. All of this is more or less automatic.

QoS allows control of the bandwidth allocation to different services, netmasks, MAC addresses and the four LAN ports.

Main WAN QoS Settings

Start QoS Enable Disable

Port WAN

Packet Scheduler HTB

Uplink (kbps) 0

Downlink (kbps) 0

Bkup WAN QoS Settings

Start QoS Enable Disable

Port WAN

Packet Scheduler HTB

Uplink (kbps) 0

Downlink (kbps) 0

Uplink (kbps) : In order to use bandwidth management (QoS) you must enter bandwidth values for your uplink. These are generally 80% to 90% of your maximum bandwidth.

Downlink (kbps) :In order to use bandwidth management (QoS) you must enter bandwidth values for your downlink. These are generally 80% to 90% of your maximum bandwidth.

3.3.8.2 Classify

Netmask Priority

Netmask Priority

| Delete | IP/Mask | Priority |
|--------------------------|---|---|
| <input type="checkbox"/> | 192.168.1.1/24 | Exempt ▼ |
| <input type="checkbox"/> | 192.168.2.3/24 | Standard ▼ |
| <input type="checkbox"/> | 192.168.3.4/32 | Express ▼ |
| <input type="checkbox"/> | 192.168.4.5/32 | Bulk ▼ |
| | Add 0 0 0 0 / 0 | |

You may specify priority for all traffic from a given IP address or IP Range.

Check all values and click **Save Settings** to save your settings. Click the **Cancel changes** button to cancel your unsaved changes.

3.3.9 Applications

3.3.9.1 Serial Applications

There is a console port on F-DPU100. Normally, this port is used to debug the F-DPU100. This port can also be used as a serial port. The F-DPU100 has embedded a serial to TCP program.

The data sent to the serial port is encapsulated by TCP/IP protocol stack and then is sent to the destination server. This function can work as a DTU (Data Terminal Unit).

Serial Applications

Serial Applications Enable Disable

Baudrate

Databit

Stopbit

Parity

Flow Control

Protocol

Server Address

Server Port

Device Number

Device Id

Heartbeat Interval

Baudrate: Baud rate indicates the number of bytes per second transported by device, commonly used baud rate is 115200, 57600, 38400, 19200.

Databit: the data bits can be 4, 5, 6, 7, 8, constitute a character. The ASCII code is usually used. Starting from the most significant bit is transmitted,

Stopbit: it marks the end of a character data. It is a high level of 1, 1.5, 2.

Parity: use a set of data to check the data error .

Flow control: including the hardware part and software part in two ways.

Enable Serial TCP Function: Enable the serial to TCP function

Protocol Type: The protocol type to transmit data.

UDP(DTU) – Data transmit with UDP protocol , work as a Four-Faith IP MODEM device which has application protocol and hear beat mechanism.

Pure UDP – Data transmit with standard UDP protocol.

TCP(DTU) -- Data transmit with TCP protocol , work as a Four-Faith P MODEM device which has application protocol and hear beat mechanism.

Pure TCP -- Data transmit with standard TCP protocol, F-DPU100 is the client.

TCP Server -- Data transmit with standard TCP protocol, F-DPU100 is the server.

TCST -- Data transmit with TCP protocol, Using a custom data

Server Address: The data service center’s IP Address or domain name.

Server Port: The data service center’s listening port.

Device ID: The F-DPU100’s identity ID.

Device Number: The F-DPU100’s phone number.

Heartbeat Interval: The time interval to send heart beat packet. This item is valid only

when you choose UDP(DTU) or TCP(DTU) protocol type.

TCP Server Listen Port: This item is valid when Protocol Type is “TCP Server”

Custom Heartbeat Packet : This item is valid when Protocol Type is “TCST”

Custom Registration Packets: This item is valid when Protocol Type is “TCST”

3.3.9.2 communication gateway

Communication management

Communication management Enable Disable

Select Channel

Select Channel ▼

Com Enable Enable Disable

Acquisition service

Acquisition service Enable Disable

Protocol ▼

Byte Order ▼

Acq intv(s)

Retransmission timeout(s)

Retransmission times

| Modbus Configure | | | | | | | |
|------------------|---------------|------------------|---------------|------------|-------|-----------|--------|
| SN | Slave Address | Data Name | Function code | Start Addr | Count | Data Type | Delete |
| 1 | 1 | chn0.mdb.s.coil | 1 | 100 | 32 | bit ▼ | Delete |
| 2 | 1 | chn0.mdb.s.disc | 2 | 200 | 24 | bit ▼ | Delete |
| 3 | 1 | mdbs.hold | 3 | 300 | 4 | short ▼ | Delete |
| 4 | 1 | chn0.mdb.s.input | 4 | 400 | 4 | short ▼ | Delete |
| 5 | 2 | chn0.dev2.coil | 1 | 100 | 32 | bit ▼ | Delete |

Port ▼

Server Addr

Server Port

Data service

Data service Enable Disable

Select Channel:Select the channels that need to be used, each of which can be used as a collection service or a data service mode.

Acquisition service:Collect information from the accessed device.

Data service:Provide the information that is collected as a slave or a server.

Protocol: protocol used for communication between devices. The supported protocols are:

Modbus RTU, MODBUS ASCII, Modbus TCP, BACnet MSTP, BACnet BIP, IEC101, IEC104.

Port: the mode of communication used between devices. Currently, there are serial ports and tcp/udp protocols.

Protocol:

 Byte Order:

 Acq intv(s):

 Retransmission timeout(s):

 Retransmission times:

| Modbus Configure | | | | | | | |
|------------------|---------------|-----------------|---------------|------------|-------|-----------|--------|
| SN | Slave Address | Data Name | Function code | Start Addr | Count | Data Type | Delete |
| 1 | 1 | chn0.mdfs.coil | 1 | 100 | 32 | bit | Delete |
| 2 | 1 | chn0.mdfs.disc | 2 | 200 | 24 | bit | Delete |
| 3 | 1 | mdfs.hold | 3 | 300 | 4 | short | Delete |
| 4 | 1 | chn0.mdfs.input | 4 | 400 | 4 | short | Delete |
| 5 | 2 | chn0.dev2.coil | 1 | 100 | 32 | bit | Delete |

Description of the Modbus protocol

Slave address: the address of the device that needs to be accessed. (0~255).

Data name: Create data points for interconversion between different protocols.

Read coils (function code 1): Each bit in the response message is divided into a coil according to each bit in the data domain. The indicated state is 1= ON and 0= OFF. The LSB (minimum valid bit) of the first data byte includes the addressable output in the query. The other coils are analogous in turn, until the high end of the byte, and the order from the low to the high in the subsequent bytes. If the number of outputs returned is not a multiple of eight, the remaining bits in the last data bytes will be filled with zero (all the way to the high end of the byte). The number of bytes explains the complete number of bytes of the data.

Read discrete quantity (function code 2): according to each bit of the data domain, the input of the discrete quantity input in the response message is divided into one input. The indicated state is 1= ON and 0= OFF. The LSB (minimum valid bit) of the first data byte includes the input that is addressed in the inquiry. The other inputs are analogous in turn, until the high end of the byte, and the order from the low to the high in the subsequent bytes. If the number of inputs returned is not a multiple of eight, the remaining bits in the final data bytes will be filled with zero (all the way to the high end of the byte). The number of bytes explains the complete number of bytes of the data.

Read hold register (the function code is 3): in a remote device that uses this function code to read the content of the continuous block of the hold register.

Read input register (function code 4): in a remote device, the function code is used to read the content of the continuous block of the input register.

| | |
|-----------------------|---|
| Protocol | <input type="text" value="Bacnet BIP"/> |
| MSTP MAC(0~254) | <input type="text"/> |
| Device Number(0~2^32) | <input type="text"/> |

BACTNET

MSTP MAC:the address of the device that needs to be accessed. (0~255).

Device Number:Indicate the number of the device.

The IEC power agreement

| | |
|---------------------------|---|
| Protocol | <input type="text" value="IEC60870_5_101"/> |
| Link Addr | <input type="text"/> |
| Common Address | <input type="text"/> |
| Reson Byte Length | <input type="text" value="1"/> |
| ASDU Common Addr Length | <input type="text" value="1"/> |
| Infomation Addr Length | <input type="text" value="1"/> |
| Time period(s) | <input type="text"/> |
| Fullcall cycle(s) | <input type="text"/> |
| Usr2call cycle(s) | <input type="text"/> |
| Electricity Call cycle(s) | <input type="text"/> |
| Link Test cycle(s) | <input type="text"/> |
| T1(104) | <input type="text"/> |
| T2(104) | <input type="text"/> |
| T3(104) | <input type="text"/> |
| Retransmission timeout(s) | <input type="text"/> |
| Retransmission times | <input type="text"/> |

Link Addr:Used for equipment addressing.

Common address:The same as the link address, as the terminal address.

Reson Byte Length:The 101 protocol is generally 1 bytes, and the 104 protocol is generally 2 bytes.

ASDU Common Addr Length:The 101 protocol is generally 1 bytes, and the 104 protocol is generally 2 bytes.

Infomation Addr Length:The 101 protocol is generally 2 bytes, and the 104 protocol is generally 3 bytes.

Time period:The period of clock synchronization between the main station and the sub station.

Fullcall cycle:After the call control station is initialized, the control station must obtain all the state signals of the field equipment and all the analog data.

Usr2call cycle:Teleconnection and telemetry are usually circulatory.

Electricity Call cycle: Get data tiring regularly.

Link Test cycle:When the link does not interact with the data, it is necessary to send the link test message regularly to see if the detection link is disconnected.

T1: control message confirms the timeout and sends the test frame.

T2:The monitoring message responds to the timeout, sending the S confirmation frame.

T3:Long time idle timeout, send test frames.

Retransmission timeout:The timeout time of the message is repeated.

Retransmission times:The number of times the message is re sent.

Device management

| SN | Device Number | Device Number | Device Type | Telesignalling count | undefined | Remote control count | Pluse count | Telesignalling flag | Telemetry flag | Pulse flag | Delete |
|----|---------------|---------------|-------------|----------------------|-----------|----------------------|-------------|---------------------|----------------|------------|--------|
| 1 | 001 | 1 | | | | | | | | | Delete |

Add

Collection content

| SN | Device Number | Collection Address | Collection Type | Data Name | Delete |
|----|---------------|--------------------|-----------------|-----------|--------|
| 1 | 1 ▼ | | Telemetry ▼ | | Delete |

Add

Device management: add configuration of terminal equipment, can be configured as well as queries, these parameters include the number of devices, the device address, type of equipment, a number of remote communication, remote control number, to measure the number of pulses, telesignalling telemetry flag, flag, flag pulse.

Collection of content: create data points and relate to the device.

Port Serial ▼

Serial Com Com1 ▼

Com Enable Enable Disable

Baudrate 115200 ▼

Databit 8 ▼

Stopbit 1 ▼

Parity None ▼

Flow Control None ▼

Baudrate: Baud rate indicates the number of bytes per second transported by device, commonly used baud rate is 115200, 57600, 38400, 19200.

Databit: the data bits can be 4, 5, 6, 7, 8, constitute a character. The ASCII code is usually used. Starting from the most significant bit is transmitted,.

Stopbit: it marks the end of a character data. It is a high level of 1, 1.5, 2.

Parity: use a set of data to check the data error .

Flow control: including the hardware part and software part in two ways.

Port

Server Addr

Server Port

Server Addr: the IP address or domain name of the data service center that communicates with the TCP program that is communicated with the F-DPU100's serial port.

Server Port: the port that the data service center program listens to.

Port

Listening Port

Listening Port: The device is used as a port to monitor the data service center program.

UDP Mode

Port

Server Addr

Server Port

Server Addr: the IP address or domain name of the data service center that communicates with the TCP program that is communicated with the F-DPU100's serial port.

Server Port: the port that the data service center program listens to.

Data service

Data service Enable Disable

Protocol

Slave Address

| Data Configure | | | | | |
|----------------|-----------------------------------|---|--|------------------------------------|---------------------------------------|
| SN | Data Address | Data Name | Function code | Data Value | Delete |
| 1 | <input type="text" value="2000"/> | <input type="text" value="chn0.mdb.s.coil"/> | <input type="text" value="Read Coils"/> | <input type="text" value="bit"/> | <input type="button" value="Delete"/> |
| 2 | <input type="text" value="3000"/> | <input type="text" value="chn0.mdb.s.disc"/> | <input type="text" value="Read Discrete"/> | <input type="text" value="bit"/> | <input type="button" value="Delete"/> |
| 3 | <input type="text" value="4000"/> | <input type="text" value="chn0.mdb.s.coil"/> | <input type="text" value="Read Hold"/> | <input type="text" value="short"/> | <input type="button" value="Delete"/> |
| 4 | <input type="text" value="5000"/> | <input type="text" value="chn0.mdb.s.input"/> | <input type="text" value="Read Input"/> | <input type="text" value="short"/> | <input type="button" value="Delete"/> |

Port

Listening Port

The configuration item of the data service section is roughly the same as the collection part, which mainly provides the forwarding data service.

Protocol: protocol used for communication between devices. The supported protocols are: Modbus RTU, MODBUS ASCII, Modbus TCP, BACnet MSTP, BACnet BIP, IEC101, IEC104.

Modbus Data configure

It is mainly related to the data points based on the different functional codes of the Modbus protocol. The main configuration item has the data address (the Modbus start address), the data name (that is, the point that provides the collection), the function code, and the data type.

IEC101,IEC104

Data service Enable Disable

Protocol IEC60870_5_101 ▼

Link Addr 2

Reson Byte Length 1 ▼

ASDU Common Addr Length 2 ▼

Infomation Addr Length 3 ▼

Link Test cycle(s) 30

Common Address 2

T1(104) 20

T2(104) 20

T3(104) 30

| Data Configure | | | | | |
|----------------|--------------|--------------------|------------------|------------|--------|
| SN | Data Address | Data Name | Data Type | Data Value | Delete |
| 1 | 2000 | chn0.mdb.s.coil ▼ | Telesignalling ▼ | bit ▼ | Delete |
| 2 | 2001 | chn0.mdb.s.coil ▼ | Telesignalling ▼ | bit ▼ | Delete |
| 3 | 2002 | chn0.mdb.s.coil ▼ | Telesignalling ▼ | bit ▼ | Delete |
| 4 | 2003 | chn0.mdb.s.coil ▼ | Telesignalling ▼ | bit ▼ | Delete |
| 5 | 1000 | mdbs.hold ▼ | Telemetering ▼ | short ▼ | Delete |
| 6 | 1001 | mdbs.hold ▼ | Telemetering ▼ | short ▼ | Delete |
| 7 | 1002 | mdbs.hold ▼ | Telemetering ▼ | short ▼ | Delete |
| 8 | 1003 | mdbs.hold ▼ | Telemetering ▼ | short ▼ | Delete |
| 9 | 3000 | chn0.mdb.s.input ▼ | Electric pulse ▼ | int ▼ | Delete |
| 10 | 3001 | chn0.mdb.s.input ▼ | Electric pulse ▼ | int ▼ | Delete |
| 11 | 2004 | chn0.dev2.coil ▼ | Telesignalling ▼ | bit ▼ | Delete |
| 12 | 2005 | chn0.dev2.coil ▼ | Telesignalling ▼ | bit ▼ | Delete |

Link Addr:Used for equipment addressing.

Common address:The same as the link address, as the terminal address.

Reson Byte Length:The 101 protocol is generally 1 bytes, and the 104 protocol is generally 2 bytes.

ASDU Common Addr Length:The 101 protocol is generally 1 bytes, and the 104 protocol is

generally 2 bytes.

Information Addr Length:The 101 protocol is generally 2 bytes, and the 104 protocol is generally 3 bytes.

Link Test cycle:When the link does not interact with the data, it is necessary to send the link test message regularly to see if the detection link is disconnected.

T1: control message confirms the timeout and sends the test frame.

T2:The monitoring message responds to the timeout, sending the S confirmation frame.

T3:Long time idle timeout, send test frames.

3.3.10 Administration

3.3.10.1 Management

The Management screen allows you to change the F-DPU100's settings. On this page you will find most of the configurable items of the F-DPU100 code.

Router Password

| | |
|---------------------|--------------------------|
| Router Username | <input type="password"/> |
| Router Password | <input type="password"/> |
| Re-enter to confirm | <input type="password"/> |

The new password must not exceed 32 characters in length and must not include any spaces. Enter the new password a second time to confirm it.

Note :

Default username is admin.

It is strongly recommended that you change the factory default password of the F-DPU100, which is admin. All users who try to access the F-DPU100's web-based utility or Setup Wizard will be prompted for the F-DPU100's password.

Web Access

This feature allows you to manage the F-DPU100 using either HTTP protocol or the HTTPS protocol. If you choose to disable this feature, a manual reboot will be required.You can also activate or not the F-DPU100 information web page. It's now possible to password protect this page (same username and password than above).

Web Access

| | |
|-------------------------------|---|
| Protocol | <input checked="" type="checkbox"/> HTTP <input type="checkbox"/> HTTPS |
| Auto-Refresh (in seconds) | <input type="text" value="3"/> |
| Enable Info Site | <input checked="" type="radio"/> Enable <input type="radio"/> Disable |
| Info Site Password Protection | <input type="checkbox"/> Enabled |

Protocol : This feature allows you to manage the F-DPU100 using either HTTP protocol or the HTTPS protocol

Auto-Refresh : Adjusts the Web GUI automatic refresh interval. 0 disables this feature completely

Enable Info Site : Enable or disable the login system information page

Info Site Password Protection : Enable or disable the password protection feature of the system information page

Remote Access

| | | |
|--------------------|---|-----------------------------------|
| Web GUI Management | <input checked="" type="radio"/> Enable <input type="radio"/> Disable | |
| Use HTTPS | <input type="checkbox"/> | |
| Web GUI Port | <input type="text" value="8080"/> | (Default: 8080, Range: 1 - 65535) |
| SSH Management | <input checked="" type="radio"/> Enable <input type="radio"/> Disable | |
| SSH Remote Port | <input type="text" value="22"/> | (Default: 22, Range: 1 - 65535) |
| Telnet Management | <input type="radio"/> Enable <input checked="" type="radio"/> Disable | |

Remote Access : This feature allows you to manage the F-DPU100 from a remote location, via the Internet. To disable this feature, keep the default setting, Disable. To enable this feature, select Enable, and use the specified port (default is 8080) on your PC to remotely manage the F-DPU100. You must also change the F-DPU100's default password to one of your own, if you haven't already. To remotely manage the F-DPU100, enter http://xxx.xxx.xxx.xxx:8080 (the x's represent the F-DPU100's Internet IP address, and 8080 represents the specified port) in your web browser's address field. You will be asked for the F-DPU100's password.

If you use https you need to specify the url as https://xxx.xxx.xxx.xxx:8080 (not all firmwares does support this without rebuilding with SSL support).

SSH Management: You can also enable SSH to remotely access the F-DPU100 by Secure Shell. Note that SSH daemon needs to be enable in Services page.

Note :

If the Remote F-DPU100 Access feature is enabled, anyone who knows the F-DPU100's Internet IP address and password will be able to alter the F-DPU100's settings.

Telnet Management : Enable or disable remote Telnet function

Cron

| | |
|----------------------|---|
| Cron | <input checked="" type="radio"/> Enable <input type="radio"/> Disable |
| Additional Cron Jobs | <input type="text"/> |

Cron : The cron subsystem schedules execution of Linux commands. You'll need to use the command line or startup scripts to actually use this.

Language Selection

| | |
|----------|--------------------------------------|
| Language | <input type="text" value="English"/> |
|----------|--------------------------------------|

Language : Set up the F-DPU100 page shows the type of language, including simplified Chinese and English.

Device Management

Device Management Enable Disable

Device Management Server IP

Device Management Server Listen Port (Default: 40001, Range: 1 - 65535)

Heart Interval (Default: 60Sec, Range: 1 - 999)

Device Number

Device Phone Number

Device Type Description

Remote Upgrade: custom-developed remote management server for this station F-DPU100 monitoring and management, configuration parameters, WIFI advertising updates.

3.3.10.2 Keep Alive

Schedule Boot&Shutdown

Schedule Boot&Shutdown

Schedule Boot&Shutdown Enable Disable

Match Day Weekday Days Weekdays

Shutdown Time :

Shutdown Date * Sunday

Boot Time :

Boot Date * Sunday

The user can set the startup or shutdown time:

For example, the user wants to set the start time at 8:07 and boot time at 9:07.

Schedule Boot&Shutdown

Schedule Boot&Shutdown Enable Disable

Match Day Weekday Days Weekdays

Shutdown Time :

Shutdown Date * Sunday

Boot Time :

Boot Date * Sunday

Schedule Reboot

Schedule Reboot

Schedule Reboot Enable Disable

Interval (in seconds)

At a set Time :

You can schedule regular reboots for the F-DPU100 :

- Regularly after xxx seconds.
- At a specific date time each week or everyday.

Note :

For date based reboots Cron must be activated. See Management for Cron activation.

3.3.10.3 Commands

Commands : You are able to run command lines directly via the Webinterface.

Command Shell

Commands

Run Command : You can run command lines via the web interface. Fill the text area with your command and click Run Commands to submit.

Startup : You can save some command lines to be executed at startup's F-DPU100. Fill the text area with commands (only one command by row) and click Save Startup.

Shutdown : You can save some command lines to be executed at shutdown's F-DPU100. Fill the text area with commands (only one command by row) and click Save Shutdown.

Firewall : Each time the firewall is started, it can run some custom iptables instructions. Fill the text area with firewall's instructions (only one command by row) and click Save Firewall.

Custom Script : Custom script is stored in /tmp/custom.sh file. You can run it manually or use cron to call it. Fill the text area with script's instructions (only one command by row) and click Save Custom Script.

3.3.10.4 Factory Defaults

Factory Defaults

Reset router settings

Restore Factory Defaults Yes No

Reset F-DPU100 settings : Click the Yes button to reset all configuration settings to their default values. Then click the Apply Settings button.

Note :

Any settings you have saved will be lost when the default settings are restored. After restoring the F-DPU100 is accessible under the default IP address 192.168.1.1 and the default password admin.

3.3.10.5 Firmware Upgrade



The screenshot shows a web interface for firmware upgrade. It has a title "Firmware Upgrade" in blue. Below the title, there is a label "After flashing, reset to" followed by a dropdown menu currently set to "Don't reset". Below that, there is a label "Please select a file to upgrade" followed by a file selection input field and a "浏览..." (Browse...) button.

Firmware Upgrade : New firmware versions are posted at www.four-faith.com and can be downloaded. If the F-DPU100 is not experiencing difficulties, then there is no need to download a more recent firmware version, unless that version has a new feature that you want to use.

Note :

When you upgrade the F-DPU100's firmware, you lose its configuration settings, so make sure you write down the F-DPU100 settings before you upgrade its firmware.

To upgrade the F-DPU100's firmware:

1. Download the firmware upgrade file from the website.
2. Click the Browse... button and chose the firmware upgrade file.
3. Click the Upgrade button and wait until the upgrade is finished.


Note :

Upgrading firmware may take a few minutes.

Do not turn off the power or press the reset button!

After flashing, reset to If you want to reset the F-DPU100 to the default settings for the firmware version you are upgrading to, click the Firmware Defaults option.

3.3.10.6 Backup

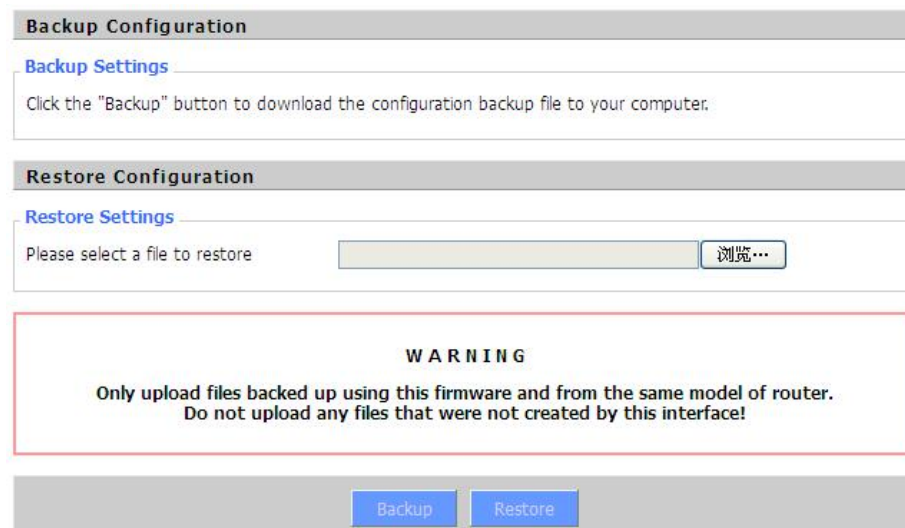

The screenshot shows a web interface for backup and restore configuration. It has two main sections: "Backup Configuration" and "Restore Configuration".

Backup Configuration: Under "Backup Settings", there is a text instruction: "Click the 'Backup' button to download the configuration backup file to your computer."

Restore Configuration: Under "Restore Settings", there is a label "Please select a file to restore" followed by a file selection input field and a "浏览..." (Browse...) button.

WARNING: A red-bordered box contains the following text: "Only upload files backed up using this firmware and from the same model of router. Do not upload any files that were not created by this interface!"

At the bottom, there are two buttons: "Backup" and "Restore".

Backup Settings : You may backup your current configuration in case you need to reset the F-DPU100 back to its factory default settings. Click the Backup button to backup your current configuration.

Restore Settings : Click the Browse... button to browse for a configuration file that is currently saved on your PC. Click the Restore button to overwrite all current configurations with the ones in the configuration file.

Note :

Only restore configurations with files backed up using the same firmware and the same model of F-DPU100.

3.3.11 Status

3.3.11.1 F-DPU100

| System | |
|------------------|--------------------------------------|
| Router Name | Four-Faith |
| Router Model | Four-Faith Router |
| Firmware Version | FXXXX v1.0 (01/10/12) std - build 94 |
| MAC Address | <u>00:AA:BB:CC:DD:44</u> |
| Host Name | |
| WAN Domain Name | |
| LAN Domain Name | |
| Current Time | Sat, 01 Jan 2000 00:51:29 |
| Uptime | 51 min, |

F-DPU100 Name: name of the F-DPU100, setting→basic setting to modify

F-DPU100 Model: model of the F-DPU100, unavailable to modify

Firmware Version: software version information

MAC Address: MAC address of WAN, setting→Clone MAC Address to modify

Host Name: host name of the F-DPU100, setting→basic setting to modify

WAN Domain Name: domain name of WAN, setting→basic setting to modify

LAN Domain Name: domain name of LAN, unavailable to modify

Current Time: local time of the system

Uptime: operating uptime as long as the system is powered on



Total Available: the room for total available of RAM (that is physical memory minus some reserve and the kernel of binary code bytes)

Free: free memory, the F-DPU100 will reboot if the memory is less than 500kB

Used: used memory, total available memory minus free memory

Buffers: used memory for buffers,

Cached: the memory used by high-speed cache memory

Active: active use of buffer or cache memory page file size

Inactive: not often used in a buffer or cache memory page file size



IP Filter Maximum Ports: preset is 4096, available to re-management

Active IP Connections: real time monitor active IP connections of the system, click to see the table as blow:

Active IP Connections

53

| No. | Protocol | Timeout (s) | Source Address | Remote Address | Service Name | State |
|-----|----------|-------------|----------------|-----------------|--------------|----------------|
| 1 | TCP | 60 | 192.168.1.120 | 192.168.1.1 | | 80 TIME_WAIT |
| 2 | TCP | 30 | 192.168.1.120 | 192.168.1.1 | | 80 TIME_WAIT |
| 3 | TCP | 65 | 192.168.1.120 | 192.168.1.1 | | 80 TIME_WAIT |
| 4 | TCP | 96 | 192.168.1.120 | 192.168.1.1 | | 80 TIME_WAIT |
| 5 | TCP | 99 | 192.168.1.120 | 192.168.1.1 | | 80 TIME_WAIT |
| 6 | TCP | 70 | 192.168.1.120 | 192.168.1.1 | | 80 TIME_WAIT |
| 7 | TCP | 74 | 192.168.1.120 | 192.168.1.1 | | 80 TIME_WAIT |
| 8 | TCP | 115 | 192.168.1.120 | 192.168.1.1 | | 80 TIME_WAIT |
| 9 | TCP | 84 | 192.168.1.120 | 192.168.1.1 | | 80 TIME_WAIT |
| 10 | TCP | 3599 | 192.168.1.120 | 192.168.1.1 | | 80 ESTABLISHED |
| 11 | TCP | 3599 | 192.168.1.120 | 192.168.1.1 | | 80 ESTABLISHED |
| 12 | TCP | 108 | 192.168.1.120 | 192.168.1.1 | | 80 TIME_WAIT |
| 13 | TCP | 3600 | 192.168.1.120 | 192.168.1.1 | | 80 ESTABLISHED |
| 14 | TCP | 93 | 192.168.1.120 | 192.168.1.1 | | 80 TIME_WAIT |
| 15 | TCP | 102 | 192.168.1.120 | 192.168.1.1 | | 80 TIME_WAIT |
| 16 | TCP | 74 | 192.168.1.120 | 192.168.1.1 | | 80 TIME_WAIT |
| 17 | TCP | 3599 | 192.168.1.120 | 192.168.1.1 | | 80 ESTABLISHED |
| 18 | TCP | 15 | 192.168.1.120 | 192.168.1.1 | | 80 TIME_WAIT |
| 19 | TCP | 25 | 192.168.1.120 | 192.168.1.1 | | 80 TIME_WAIT |
| 20 | TCP | 90 | 192.168.1.120 | 192.168.1.1 | | 80 TIME_WAIT |
| 21 | UDP | 26 | 192.168.8.119 | 255.255.255.255 | 1947 | UNREPLIED |
| 22 | TCP | 77 | 192.168.1.120 | 192.168.1.1 | | 80 TIME_WAIT |
| 23 | TCP | 35 | 192.168.1.120 | 192.168.1.1 | | 80 TIME_WAIT |
| 24 | TCP | 74 | 192.168.1.120 | 192.168.1.1 | | 80 TIME_WAIT |
| 25 | TCP | 40 | 192.168.1.120 | 192.168.1.1 | | 80 TIME_WAIT |
| 26 | TCP | 3599 | 192.168.1.120 | 192.168.1.1 | | 80 ESTABLISHED |
| 27 | TCP | 74 | 192.168.1.120 | 192.168.1.1 | | 80 TIME_WAIT |
| 28 | TCP | 74 | 192.168.1.120 | 192.168.1.1 | | 80 TIME_WAIT |
| 29 | TCP | 4 | 192.168.1.120 | 192.168.1.1 | | 80 TIME_WAIT |
| 30 | UDP | 31 | 192.168.8.160 | 224.0.0.1 | 9166 | UNREPLIED |
| 31 | TCP | 74 | 192.168.1.120 | 192.168.1.1 | | 80 TIME_WAIT |

Active IP Connections: total active IP connections

Protocol: connection protocol

Timeouts: connection timeouts, unit is second

Source Address: source IP address

Remote Address: remote IP address

Service Name: connecting service port

Status: displayed status

3.3.11.2 WAN

Connection Type Automatic Configuration - DHCP

Connection Uptime Not available

Connection Type: disabled, static IP, automatic configuration-DHCP, PPPOE, PPTP, L2TP, 3G/UMTS

Connection Uptime: connecting uptime; If disconnect, display Not available

IP Address 0.0.0.0

Subnet Mask 0.0.0.0

Gateway 0.0.0.0

DNS 1

DNS 2

DNS 3

IP Address: IP address of F-DPU100 WAN

Subnet Mask: subnet mask of F-DPU100 WAN

Gateway: the gateway of F-DPU100 WAN

DNS1, DNS2, DNS3: DNS1/DNS2/DNS3 of F-DPU100 WAN

Remaining Lease Time 0 days 23:38:43

Remaining Lease Time: remaining lease time of IP address in DHCP way

DHCP Release: release DHCP address


DHCP Renew: renew IP address in DHCP way, default is 1 day

Login Status Disconnected

Login Status: connection status of WAN

Disconnection: disconnect

Connection: connect

Module Type ZTE-EVDO MODULE

Signal Status -79 dBm
Network CDMA/HDR


Module Type: module type in 3G/UMTS way

Signal Status: signal intensity of the module in 3G/UMTS way

Network: network type of the module in 3G/UMTS way

Total Traffic

| | |
|-------------------|---|
| Incoming (MBytes) | 0 |
| Outgoing (MBytes) | 0 |

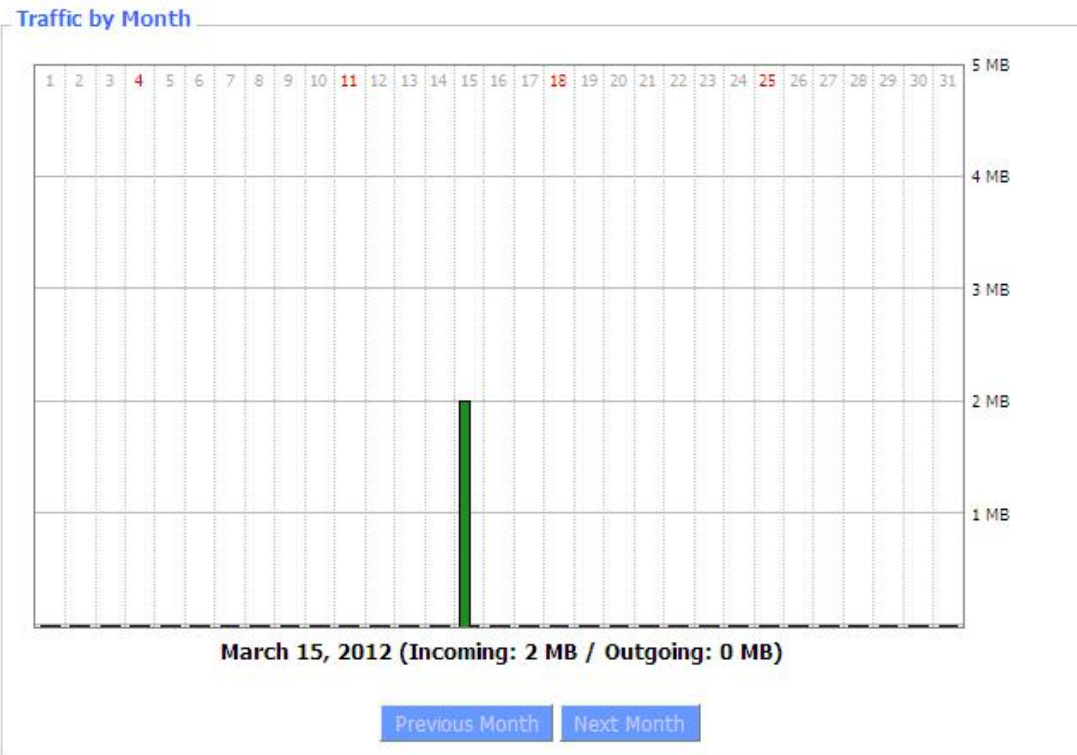

Total Flow: flow from power-off last time until now statistics, download and upload direction

Monthly Flow: the flow of a month, unit is MB

Last Month: the flow of last month

Next Month: the flow of next month

Data Administration

Backup Restore Delete

Backup: backup data administration

Restore: restore data administration

Delete: delete data administration

3.3.11.3 LAN

LAN Status

| | |
|-------------|-------------------|
| MAC Address | 00:0C:43:30:52:77 |
| IP Address | 192.168.1.1 |
| Subnet Mask | 255.255.255.0 |
| Gateway | 0.0.0.0 |
| Local DNS | 0.0.0.0 |

MAC Address: MAC Address of the LAN port ethernet

IP Address: IP Address of the LAN port

Subnet Mask: Subnet Mask of the LAN port

Gateway: Gateway of the LAN port

Local DNS: DNS of the LAN port

Active Clients

| Host Name | IP Address | MAC Address | Conn. Count | Ratio [4096] |
|-----------|---------------|--------------------------|-------------|--------------|
| * | 192.168.1.120 | <u>10:78:D2:98:C9:46</u> | 57 | 1% |

Host Name: host name of LAN client

IP Address: IP address of the client

MAC Address: MAC address of the client

Conn. Count: connection count caused by the client

Ratio: the ratio of 4096 connection

Dynamic Host Configuration Protocol

DHCP Status

| | |
|-------------------|---------------|
| DHCP Server | Enabled |
| DHCP Daemon | uDHCpd |
| Start IP Address | 192.168.1.100 |
| End IP Address | 192.168.1.149 |
| Client Lease Time | 1440 minutes |

DNCP Server: enable or disable the F-DPU100 work as a DHCP server




DHCP Daemon: the agreement allocated using DHCP including DNSMasq and uDHCpd

Starting IP Address: the starting IP Address of the DHCP server's Address pool

Ending IP Address: the ending IP Address of the DHCP server's Address pool

Client Lease Time: the lease time of DHCP client

DHCP Clients

| Host Name | IP Address | MAC Address | Client Lease Time | Delete |
|-----------------|---------------|--------------------------|-------------------|---|
| PC-201011161332 | 192.168.1.142 | <u>00:21:5C:33:4D:29</u> | 1 day 00:00:00 |  |
| jack-lincw | 192.168.1.117 | <u>44:37:E6:3F:45:54</u> | 1 day 00:00:00 |  |
| * | 192.168.1.149 | <u>00:0C:E7:00:00:00</u> | 1 day 00:00:00 |  |

Host Name: host name of LAN client

IP Address: IP address of the client

MAC Address: MAC address of the client

Expires: the expiry the client rents the IP address

Delete: click to delete DHCP client

Connected PPPOE Clients

| Interface | User Name | Local IP | Delete |
|-----------|-----------|---------------|---|
| ppp0 | hometest | 192.168.10.10 |  |

Interface: the interface assigned by dial-up system

User Name: user name of PPPoE client

Local IP: IP address assigned by PPPoE client

Delete: click to delete PPPoE client

Connected L2TP Server

| Interface | Local IP | Remote IP | Delete |
|-----------|-------------|-------------|---|
| ppp0 | 172.168.8.2 | 172.168.8.1 |  |

Interface: the interface assigned by dial-up system

Local IP: tunnel IP address of local L2TP

Remote IP: tunnel IP address of L2TP server

Delete: click to disconnect L2TP

Connected L2TP Clients

| Interface | User Name | Local IP | Remote IP | Delete |
|-----------|-----------|--------------|--------------|---|
| ppp1 | hometest | 192.168.50.2 | 120.42.46.98 |  |

Interface: the interface assigned by dial-up system


User Name: user name of the client

Local IP: tunnel IP address of L2TP client

Remote IP: IP address of L2TP client

Delete: click to delete L2TP client

Connected PPTP Server

| Interface | Local IP | Remote IP | Delete |
|-----------|-------------|-------------|---|
| ppp0 | 172.168.8.2 | 172.168.8.1 |  |

Interface: the interface assigned by dial-up system

Local IP: tunnel IP address of local PPTP

Remote IP: tunnel IP address of PPTP server

Delete: click to disconnect PPTP

Connected PPTP Clients

| Interface | User Name | Local IP | Remote IP | Delete |
|-----------|-----------|-------------|--------------|---|
| ppp1 | hometest | 192.168.5.1 | 120.42.46.98 |  |

Interface: the interface assigned by dial-up system

User Name: user name of the client

Local IP: tunnel IP address of PPTP client

Remote IP: IP address of PPTP client

Delete: click to delete PPTP client

3.3.11.4 Wireless

Wireless Status

| | |
|----------------------------|-------------------|
| MAC Address | 00:0C:43:30:52:79 |
| Radio | Radio is On |
| Mode | AP |
| Network | Mixed |
| SSID | four-faith |
| Channel | 6 (2437 MHz) |
| TX Power | 71 mW |
| Rate | 72 Mb/s |
| Encryption - Interface w10 | Disabled |
| PPTP Status | Disconnected |

MAC Address: MAC address of wireless client

Radio: display whether radio is on or not

Mode: wireless mode

Network: wireless network mode

SSID: wireless network name

Channel: wireless network channel

TX Power: reflection power of wireless network

Rate: reflection rate of wireless network

Encryption-Interface w10: enable or diasbal Encryption-Interface w10

PPTP Status: show wireless pptp status

Wireless Packet Info

| | | |
|------------------|--------------------|------|
| Received (RX) | 91125 OK, no error | 100% |
| Transmitted (TX) | 11957 OK, no error | 100% |

Received (RX): received data packet

Transmitted (TX): transmitted data packet

Wireless Nodes

Clients

| MAC Address | Interface | Uptime | TX Rate | RX Rate | Signal | Noise | SNR | Signal Quality |
|-------------|-----------|--------|---------|---------|--------|-------|-----|----------------|
| - None - | | | | | | | | |

MAC Address: MAC address of wireless client

Interface: interface of wireless client

Uptime: connecting uptime of wireless client

TX Rate: transmit rate of wireless client

RX Rate: receive rate of wireless client

Signal: the signal of wireless client

Noise: the noise of wireless client

SNR: the signal to noise ratio of wireless client

Signal Quality: signal quality of wireless client

| Neighbor's Wireless Networks | | | | | | | | | | |
|------------------------------|---------|-----------------------------------|---------|------|-------|--------|------|------|------------|----------------------|
| SSID | Mode | MAC Address | Channel | Rssi | Noise | beacon | Open | dtim | Rate | Join Site |
| tzt-3g | Unknown | 00:aa:bb:cc:dd:14 | 2 | -5 | -95 | 0 | No | 0 | 54(b/g) | Join |
| four-faith | Unknown | 00:0c:43:30:52:79 | 6 | -24 | -95 | 0 | No | 0 | 300(b/g/n) | Join |
| ff-old | AP | 00:13:10:09:56:92 | 6 | -55 | -95 | 0 | No | 0 | 54(b/g) | Join |

Neighbor's Wireless Network: display other networks nearby

SSID: the name of wireless network nearby

Mode: operating mode of wireless network nearby

MAC Address: MAC address of the wireless nearby

Channel: the channel of the wireless nearby

Rssi: signal intensity of the wireless nearby

Noise: the noise of the wireless nearby

Beacon: signal beacon of the wireless nearby


Open: the wireless nearby is open or not

Dtim: delivery traffic indication message of the wireless nearby

Rate: speed rate of the wireless nearby

Join Site: click to join wireless network nearby


3.3.11.5 Bandwidth

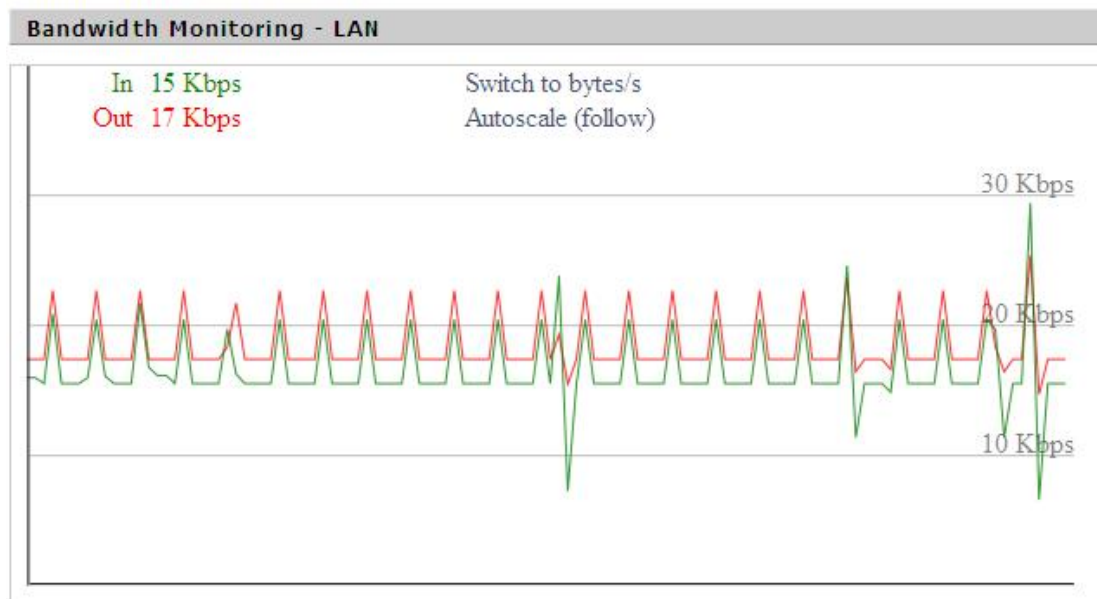

Bandwidth Monitoring-LAN Graph

abscissa axis: time


vertical axis: speed rate

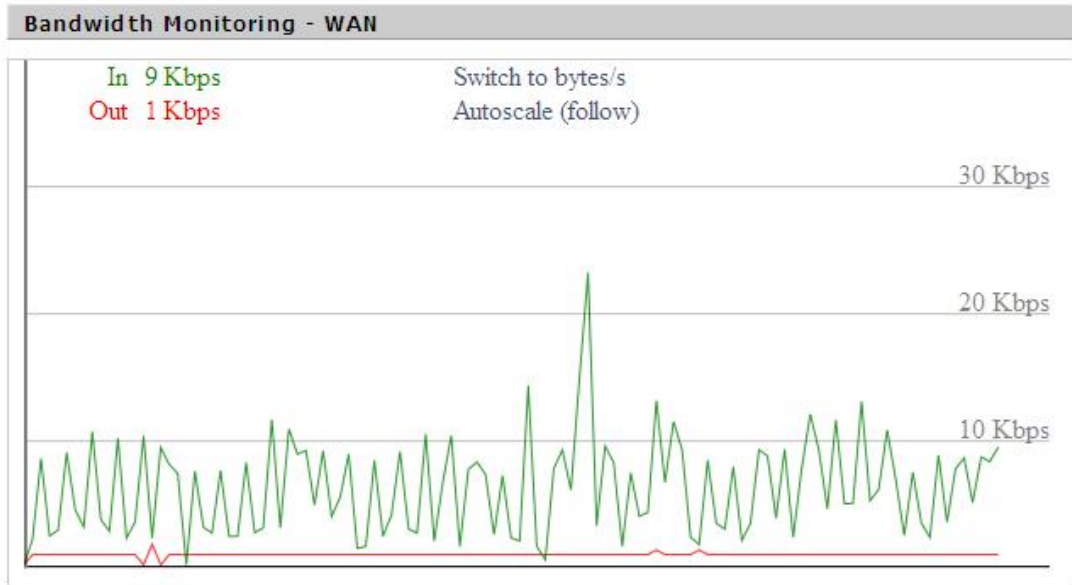

Bandwidth Monitoring-WAN Graph

abscissa axis: time

vertical axis: speed rate

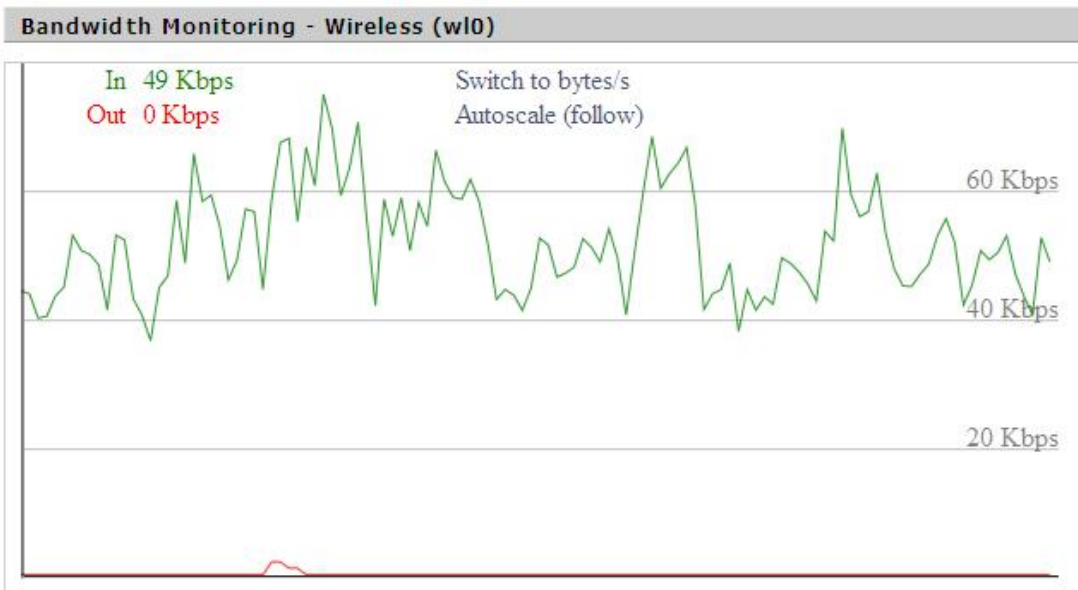

Bandwidth Monitoring-Wireless (W10) Graph

abscissa axis: time

vertical axis: speed rate

3.3.11.6 Sys-Info

| Router | |
|--------------|--------------------------|
| Router Name | Four-Faith |
| Router Model | Four-Faith Router |
| LAN MAC | <u>00:0C:43:30:52:77</u> |
| WAN MAC | <u>00:0C:43:30:52:78</u> |
| Wireless MAC | <u>00:0C:43:30:52:79</u> |
| WAN IP | 10.34.107.156 |
| LAN IP | 192.168.1.1 |

F-DPU100 Name: the name of the F-DPU100

F-DPU100 Model: the model of the F-DPU100

LAN MAC: MAC address of LAN port

WAN MAC: MAC address of WAN port

Wireless MAC: MAC address of the wireless

WAN IP: IP address of WAN port

LAN IP: IP address of LAN port

| Wireless | |
|----------|--------------|
| Radio | Radio is On |
| Mode | AP |
| Network | Mixed |
| SSID | four-faith |
| Channel | 6 (2437 MHz) |
| TX Power | 71 mW |
| Rate | 72 Mb/s |

Radio: display whether radio is on or not

Mode: wireless mode

Network: wireless network mode

SSID: wireless network name

Channel: wireless network channel

TX Power: reflection power of wireless network

Rate: reflection rate of wireless network

Wireless Packet Info

| | |
|------------------|-------------------|
| Received (RX) | 6982 OK, no error |
| Transmitted (TX) | 1498 OK, no error |

Received (RX): received data packet

Transmitted (TX): transmitted data packet

| Wireless | | | | | | | | |
|-------------|-----------|--------|---------|---------|--------|-------|-----|----------------|
| Clients | | | | | | | | |
| MAC Address | Interface | Uptime | TX Rate | RX Rate | Signal | Noise | SNR | Signal Quality |
| - None - | | | | | | | | |

MAC Address: MAC address of wireless client

Interface: interface of wireless client

Uptime: connecting uptime of wireless client

TX Rate: transmit rate of wireless client

RX Rate: receive rate of wireless client

Signal: the signal of wireless client

Noise: the noise of wireless client

SNR: the signal to noise ratio of wireless client

Signal Quality: signal quality of wireless client

Services

| | |
|-------------|----------|
| DHCP Server | Enabled |
| ff-radauth | Disabled |
| USB Support | Disabled |

DHCP Server: enabled or disabled

ff-radauth: enabled or disabled

USB Support: enabled or disabled

Memory

| | |
|-----------------|---------------------|
| Total Available | 122.3 MB / 128.0 MB |
| Free | 92.6 MB / 122.3 MB |
| Used | 29.6 MB / 122.3 MB |
| Buffers | 3.3 MB / 29.6 MB |
| Cached | 11.7 MB / 29.6 MB |
| Active | 10.3 MB / 29.6 MB |
| Inactive | 6.4 MB / 29.6 MB |

Total Available: the room for total available of RAM (that is physical memory minus some reserve and the kernel of binary code bytes)

Free: free memory, the F-DPU100 will reboot if the memory is less than 500kB

Used: used memory, total available memory minus free memory

Buffers: used memory for buffers, total available memory minus allocated memory

Cached: the memory used by high-speed cache memory

Active: Active use of buffer or cache memory page file size

Inactive: Not often used in a buffer or cache memory page file size

| DHCP | | | |
|-----------------|---------------|-------------------|----------------|
| DHCP Clients | | | |
| Host Name | IP Address | MAC Address | Expires |
| * | 192.168.1.143 | xx:xx:xx:xx:DD:45 | 1 day 00:00:00 |
| four-489e1df5fa | 192.168.1.125 | xx:xx:xx:xx:D8:F7 | 1 day 00:00:00 |
| Mycenae-PC | 192.168.1.116 | xx:xx:xx:xx:5E:30 | 1 day 00:00:00 |

Host Name: host name of LAN client

IP Address: IP address of the client


MAC Address: MAC address of the client

Expires: the expiry the client rents the IP address

Appendix

The following steps describe how to setup Windows XP Hyper Terminal.

1. Press “Start”→”Programs”→”Accessories”→”Communications”→”Hyper Terminal”

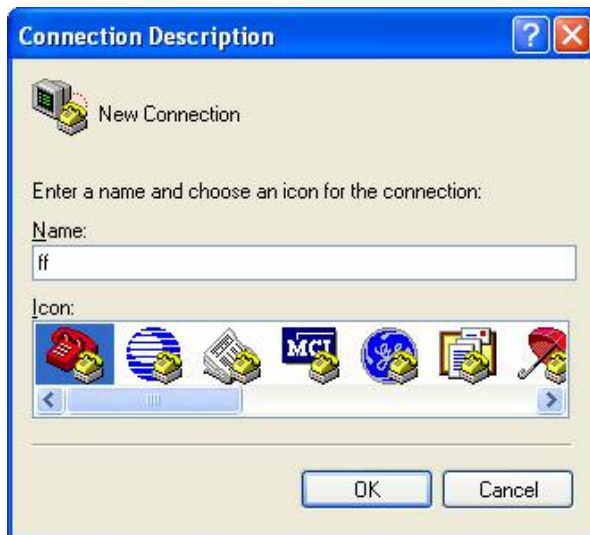


2. Input connection name, choose “OK”
3. Choose the correct COM port which connects to modem, choose “OK”




4. Configure the serial port parameters as following, choose “OK”

Bits per second: 115200
Data bits: 8
Parity: None
Stop bits: 1
Flow control: None

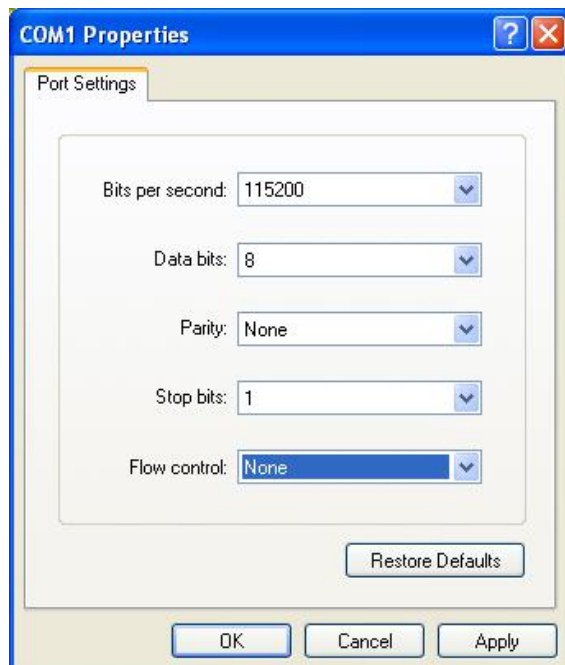

5. Complete Hyper Terminal operation, It runs as following

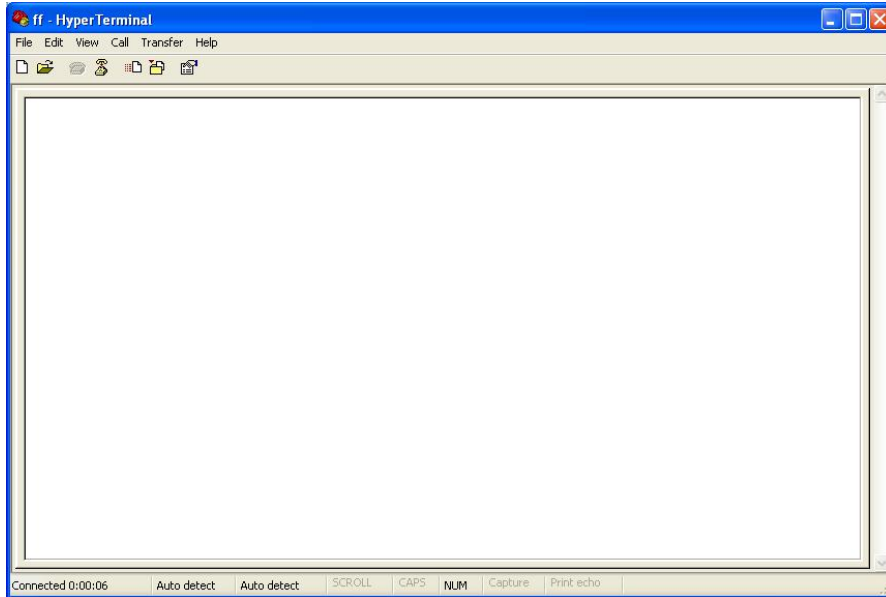

Note: If the user is using the win7 system, you can download a win7 super terminal on the internet. Universal serial interface or other similar software.